

TNC 620 HSCI

The Compact Contouring Control for Milling, Drilling and Boring Machines

Information for the Machine Tool Builder



Representante oficial de:



HEIDENHAIN

[Argentina – Bolivia – Chile – Colombia - Costa Rica – Ecuador - El Salvador –
Guatemala – Honduras – Nicaragua – Panamá – Paraguay – Perú -
República Dominicana – Uruguay – Venezuela.]




Calle 49 N° 5764 - Villa Ballester (B1653AOX) - Prov. de Buenos Aires - ARGENTINA
Tel: (+54 11) 4768-4242 / Fax: (+54 11) 4849-1212
Mail: ventas@nakase.com.ar / Web: www.nakase.com.ar




TNC Contouring Control with Drive System from HEIDENHAIN

TNC 620

- Contouring control for machines with up to 5 axes and controlled spindle
- HEIDENHAIN inverter systems and motors recommended
- Uniformly digital with HSCI interface and EnDat interface
- Compact design:
 - Screen, keyboard and main computer in one unit (MC 7110)
 - Screen and main computer in one unit (MC 7120) and separate keyboard with integrated ASCII keys
- Dimensions: 400 mm x 470 mm x 100 mm
- Integrated 15-inch TFT flat-panel display
- Memory medium for NC programs: CompactFlash memory card
- Programming in HEIDENHAIN conversational format or according to ISO
- Standard milling, drilling and boring cycles
- Touch probe cycles
- Short block processing times
- USB removable media can be connected

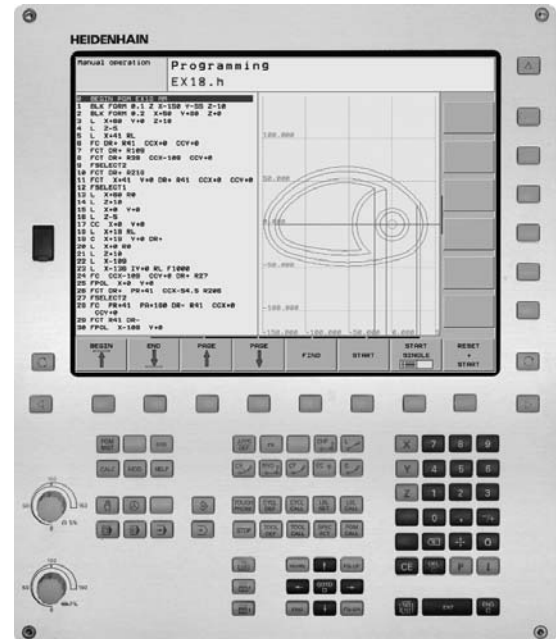

TNC 620 with integrated keyboard (MC 7110)

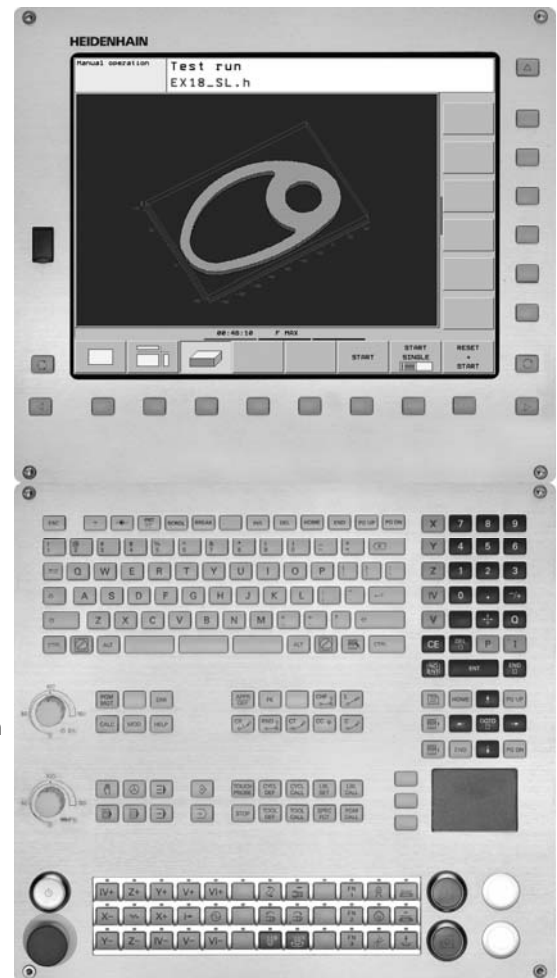

TNC 620 with separate keyboard (MC 7120 and TE 730)

System tests

Controls, motors and encoders from HEIDENHAIN are in most cases integrated as components in larger systems. In these cases, comprehensive tests of the complete system are required, irrespective of the specifications of the individual devices.

Consumables

In particular the following parts in controls from HEIDENHAIN are subject to wear:

- Buffer battery
- Fan

Standards

Standards (ISO, EN, etc.) apply only where explicitly stated in the catalog.

Note

Microsoft Windows, Windows 2000, Windows XP, Windows Vista, Windows 7 and the Microsoft Internet Explorer logo are registered trademarks of Microsoft Corporation.

Contents

	Page
Tables with Technical Specifications, Machine Interfacing, User Functions and Accessories	4
Digital Control Design	14
Control Systems	15
Cable Overviews	31
Technical Description	37
Overall Dimensions	58
Documentation	71
Service	72
Other HEIDENHAIN Controls	73
Subject Index	74

Please refer to the **page references** in the **tables** with the **specifications**.

The features and specifications described here apply for the following control and NC software version:

TNC 620	34056x03
----------------	----------

Some of these specifications require particular machine configurations. Please note also that, for some functions, a special PLC program must be created by the manufacturer.

This catalog supersedes all previous editions, which thereby become invalid.

Subject to change without notice

Specifications

Specifications	TNC 620		Page
Control systems	Integrated keyboard	Separate keyboard	15
Main computer	MC 7110 (screen and keyboard integrated)	MC 7120 (screen integrated)	16
Controller unit	CC 6106 or UEC 111 (inverter and system-PL integrated) or UEC 112 (inverter and system-PL integrated)		19
Keyboard unit	Integrated	TE 730 or TE 720 or TE 735 (integrated machine operating panel)	23
Screen	15-inch TFT color flat-panel display, integrated		
PLC inputs/outputs	Series PL 6xxx or Series PL 5xx or Series UEC 11x		21 22 20
Inverter systems			*
Compact inverters	✓		*
Modular inverters	✓		*
Axes	Basic version: 4 control loops (3 axes + closed-loop spindle) Optional: 4th axis with option 0 5th axis with option 1		18, 37
Rotary axes	✓		37
Synchronized axes	✓		39
PLC axes	✓		39, 51
Spindle	Max. 2; second spindle can be controlled alternatively to the first		47
Shaft speed ¹⁾	Maximum spindle speed: 60 000 min ⁻¹		47
Operating-mode switchover	✓		47
Position-controlled spindle	✓		47
Oriented spindle stop	✓		47
Gear shifting	✓		47
NC program memory	300 MB		
Input resolution and display step			
Linear axes	1 µm 0.01 µm with option 23		37
Rotary axes	0.001° 0.00001° with option 23		37

¹⁾ On motors with two pole pairs

* For further information, refer to the *Inverter Systems* brochure (ID 622420-xx)

Specifications	TNC 620	Page
Interpolation		**
Straight line	In 4 axes In 5 axes with option 9	**
Circle	In 2 axes In 3 axes with option 8	**
Helix	✓	**
Axis feedback control		40
With feedforward	✓	40
With following error	✓	40
Maximum feed rate	$\frac{60000 \text{ min}^{-1}}{\text{No. of pole pairs in motor}} \cdot \text{Ball screw pitch [mm]}$ at $f_{\text{PWM}} = 5000 \text{ Hz}$	
Cycle times of main computer	MC 71x0	41
Block processing time	1.5 ms	42
Cycle times of controller unit	CC 6106/UEC 11x	19, 41
Path interpolation	3 ms	41
Fine interpolation	<i>Single speed:</i> 0.2 ms <i>Double speed:</i> 0.1 ms with option 49	41
Permissible temperature range	Operation +5 °C to +45 °C Storage -35 °C to +65 °C	

** For further information, refer to the *TNC 620* brochure

Machine Interfacing

Machine Interfacing	TNC 620	Page
Error compensation	✓	44
Linear axis error	✓	44
Nonlinear axis error	✓	44
Backlash	✓	44
Reversal peaks with circular movement	✓	44
Hysteresis	✓	44
Thermal expansion	✓	44
Static friction	✓	44
Sliding friction	✓	44
Integrated PLC		50
Program format	Statement list	50
Program input on the TNC	Via external USB keyboard or via soft keys	50
Program input via PC	✓	
Symbolic PLC-NC interface	✓	50
PLC memory	50 MB	50
PLC cycle time	Typically 21 ms, adjustable	50
PLC inputs/outputs¹⁾	1 x PLB 62xx or UEC 11x and max. 7 x PLB 61xx and 1 x MB 7xx (with TE 735 integrated) or PLB 6001 (a total of max. 9 components, however)	21
PLC inputs, 24 V DC	Via PL or UEC 11x	21
PLC outputs, 24 V DC	Via PL or UEC 11x	21
Analog inputs, ±10 V DC	Via PL	21
Inputs for PT 100 thermistors	Via PL	21
Analog outputs, ±10 V DC	Via PL	21
PLC functions	✓	51
Small PLC window	✓	51
PLC soft keys	✓	51
PLC positioning	✓	51
PLC basic program	✓	53

¹⁾ Further PLC inputs/outputs via PL 550 for connection to MC 6xxx with PROFIBUS-DP interface

Machine Interfacing	TNC 620			Page
Encoder inputs	UEC 111	UEC 112	CC 6106	43
Position	4	5	6	43
Incremental	1 V _{PP}			43
absolute	EnDat			43
Shaft speed	4	5	6	43
Incremental	1 V _{PP}			43
absolute	EnDat			43
Commissioning and diagnostic aids				48
DriveDiag	Software for diagnosis of digital drive systems			48
TNCopt	Software for putting digital control loops into service			48
ConfigDesign	Software for creation of the machine configuration			48
Integrated oscilloscope	✓			49
Trace function	✓			49
Logic diagram	✓			49
API DATA function	✓			49
Table function	✓			49
Online monitor (OLM)	✓			48
Log	✓			49
TNCscope	✓			49
Bus diagnosis	✓			49
Data interfaces				55
Ethernet (100BaseT)	✓			55
USB 2.0	3 (1 on the front, 2 on the rear)			55
RS-232-C/V.24	✓			55
Protocols				55
Standard data transfer	✓			55
Blockwise data transfer	✓			55
LSV2	✓			55
Integration of applications				52
High-level language programming	Python programming language used in combination with the PLC (option 46)			52
User interface can be custom-designed	Inclusion of specific user interfaces from the machine tool builder (option 46)			52

Accessories

Accessories	TNC 620	Page	
Electronic handwheels	One HR 410, HR 130, or up to three HR 150 via HRA 110	25	
Touch probes	<ul style="list-style-type: none"> • One TS 220, TS 440, TS 444, TS 640 or TS 740 workpiece touch probe • One TT 140 or TL tool touch probe 	30	
PLC input/output systems	With HSCI interface	21	
Basic module	System PL ¹⁾	PLB 6204 for four I/O modules PLB 6206 for six I/O modules PLB 6208 for eight I/O modules	21
	Expansion PL	PLB 6104 for four I/O modules PLB 6106 for six I/O modules PLB 6108 for eight I/O modules	21
I/O modules	PLD-H 16-08-00: 16 digital inputs and 8 digital outputs, 24 V DC PLD-H 08-16-00: 8 digital inputs and 16 digital outputs, 24 V DC PLA-H 08-04-04: 8 analog inputs ± 10 V DC, 4 analog outputs ± 10 V DC and 4 analog PT 100 inputs	21	
HSCI adapter	PLB 6001: For connection of an OEM machine operating panel	27	
PLC input/output systems	With PROFIBUS-DP interface	22	
Basic module	PLB 550 for four I/O modules	22	
I/O modules	PLD 16-8: 16 digital inputs and 8 digital outputs, 24 V PLA 4-4: 4 analog inputs, ± 10 V, and 4 analog inputs for PT 100	22	
Machine operating panel	<ul style="list-style-type: none"> • MB 720 (integrated in TE 735) or • PLB 6001 (HSCI adapter for OEM operating panel) 	23	
Analog module	CMA-H 04-04-00: Additional module for analog axes/spindles in the HSCI system	27	
USB hub	✓	55	
PLC basic program	✓	53	

¹⁾ Integrated in UEC 11x, otherwise necessary once in each HSCI control system

Accessories	TNC 620	Page
TNC 620 programming station	Control software for PCs for programming, archiving, and training	
Software		
PLCdesign¹⁾	PLC development software	52
KinematicsDesign¹⁾	Software for kinematic configuration	46
TNCremo²⁾	Data transfer software	56
TNCremoPlus²⁾	Data transfer software with live-screen function	56
ConfigDesign¹⁾	Software for configuring the machine parameters	48
CycleDesign¹⁾	Software for creating cycle structures	54
TNCscope¹⁾	Software for data recording	49
DriveDiag¹⁾	Software for diagnosis of digital control loops	48
TNCopt¹⁾	Software for putting digital control loops into service	48
IOconfig¹⁾	Software for configuring PLC I/O and PROFIBUS-DP components	21
TeleService¹⁾	Software for remote diagnostics, monitoring, and operation	49
RemoTools SDK¹⁾	Function library for developing customized applications for communication with HEIDENHAIN controls	56

¹⁾ Available to registered customers for downloading from the Internet

²⁾ Available to all customers (without registration) for downloading from the Internet

User Functions

User functions	Standard	Option	
Brief description	•	0/1	Basic version: 3 axes plus spindle One or two additional NC axes Digital current and spindle speed control
Program entry	•		HEIDENHAIN conversational
	•		DIN/ISO (<i>with MC 7110</i> : Via soft keys or external standard USB keyboard; <i>With MC 7120</i> : via integrated ASCII keyboard)
Position data	•		Nominal positions for lines and arcs in Cartesian coordinates or polar coordinates
	•		Incremental or absolute dimensions
	•		Display and input in mm or inches
Tool compensation	•	21	Tool radius in the working plane and tool length
		9	Radius-compensated contour look-ahead for up to 99 blocks (M120)
		9	Three-dimensional tool-radius compensation for changing tool data without having to recalculate an existing program
Tool tables	•		Multiple tool tables with any number of tools
Constant contour speed	•		Relative to the path of the tool center
	•		Relative to the tool's cutting edge
Parallel operation	•		Creating a program with graphical support while another program is being run
3-D machining	•		Motion control with minimum jerk
	9		3-D tool compensation through surface normal vectors
	9		Keeping the tool normal to the contour
	9		Tool radius compensation normal to the tool direction
Rotary table machining		8	Programming of cylindrical contours as if in two axes
		8	Feed rate in distance per minute
Contour elements	•		Straight line
	•		Chamfer
	•		Circular path
	•		Circle center
	•		Circle radius
	•		Tangentially connecting circular arc
	•		Corner rounding
Approaching and departing the contour	•		Via straight line: tangential or perpendicular
	•		Via circular arc
FK free contour programming		19	FK free contour programming in HEIDENHAIN conversational format with graphic support for workpiece drawings not dimensioned for NC
Program jumps	•		Subroutines
	•		Program-section repeat
	•		Calling any program as a subroutine
Fixed cycles	•		Drilling, conventional and rigid tapping, rectangular and circular pockets
	19		Peck drilling, reaming, boring, counterboring, (centering)
	19		Milling internal and external threads
	19		Clearing level and oblique surfaces
	19		Multioperation machining of straight and circular slots
	19		Multioperation machining of rectangular and circular pockets
	19		Linear and circular point patterns
	19		Contour train, contour pocket—also with contour-parallel machining
	19		OEM cycles (special cycles developed by the machine tool builder) can be integrated

User functions	Standard	Option	
Coordinate transformation	•	8	Datum shift, rotation, mirror image, scaling factor (axis-specific) Tilting the working plane, PLANE function
Q parameters Programming with variables	•		Mathematical functions =, +, -, *, /, $\sin \alpha$, $\cos \alpha$, $\tan \alpha$, arc sin, arc cos, arc tan, a^n , e^n , ln, log, \sqrt{a} , $\sqrt{a^2 + b^2}$ Logical operations (=, ≠, <, >) Calculating with parentheses Absolute value of a number, constant π , negation, truncation of digits before or after the decimal point Functions for calculation of circles Functions for text processing
Programming aids	•		Calculator Complete list of all current error messages Context-sensitive help function for error messages TNCguide: The integrated help system. User information available directly on the iTNC 620 Graphical support for programming cycles Comment and structure blocks in the NC program
Actual position capture	•		Actual positions can be transferred directly into the NC program
Test run graphics Display modes		20 20 20	Graphic simulation before a program run, even while another program is running Plan view / projection in 3 planes / 3-D view, also in tilted working plane Magnification of details
Programming graphics	•		In the Programming and Editing mode, the contour of the NC blocks is drawn on screen while the blocks are being entered (2-D pencil-trace graphics), even while another program is running
Program-run graphics Display modes		20 20	Graphic simulation during real-time machining Plan view / projection in 3 planes / 3-D view
Machining time	•		Calculation of machining time in the Test Run operating mode Display of the current machining time in the Program Run operating modes
Returning to the contour	•		Mid-program startup in any block in the program, returning the tool to the calculated nominal position to continue machining Program interruption, leaving and returning to the contour
Preset tables	•		One preset table for storing reference points
Datum tables	•		Several datum tables for storing workpiece-related datums
Pallet tables		22	Pallet tables (with as many entries as desired for the selection of pallets, NC programs and datums) can be machined workpiece by workpiece
Touch probe cycles		17 17 17 17	Touch probe calibration Compensation of workpiece misalignment, manual or automatic Datum setting, manual or automatic Automatic tool and workpiece measurement
Parallel secondary axes	•		Compensating movement in the secondary axis U, V, W through the principal axis X, Y, Z Including movements of parallel axes in the position display of the associated principal axis (sum display) Defining the principal and secondary axes in the NC program makes it possible to run programs on different machine configurations
Conversational languages	•	41	English, Chinese (traditional, simplified), Czech, Danish, Dutch, Finnish, French, German, Hungarian, Italian, Polish, Portuguese, Russian (Cyrillic), Spanish, Swedish For more conversational languages, see <i>Options</i>

Options

Option number	Option	As of NC software 340 56x-	ID	Comment
0 1	Additional axis	01	354540-01 353904-01	Additional control loops 1 and 2
8	Software option 1	01	617920-01	Rotary table machining <ul style="list-style-type: none"> • Programming of cylindrical contours as if in two axes • Feed rate in distance per minute Interpolation: Circular in 3 axes with tilted working plane Coordinate transformation: Tilting the working plane, PLANE function
9	Software option 2	01	617921-01	Interpolation: Linear in 5 axes 3-D machining <ul style="list-style-type: none"> • 3-D tool compensation through surface normal vectors • Keeping the tool normal to the contour • Tool radius compensation normal to the tool direction
17	Touch probe functions	01	634063-01	Touch probe cycles <ul style="list-style-type: none"> • Compensation of workpiece misalignment, datum setting • Automatic tool and workpiece measurement • Enabling touch probe input for non-HEIDENHAIN systems
18	HEIDENHAIN DNC	01	526451-01	Communication with external PC applications over COM component
19	Advanced programming features	01	628252-01	FK free contour programming Fixed cycles <ul style="list-style-type: none"> • Peck drilling, reaming, boring, counterboring, centering • Milling internal and external threads • Clearing level and oblique surfaces • Multioperation machining of straight and circular slots • Multioperation machining of rectangular and circular pockets • Linear and circular point patterns • Contour train, contour pocket—also with contour-parallel machining • Special cycles developed by the machine tool builder can be integrated
20	Advanced graphic features	01	628253-01	Program verification graphics, program-run graphics Plan view, view in three planes, 3-D view
21	Software option 3	01	628254-01	Tool compensation <ul style="list-style-type: none"> • Radius-compensated contour look-ahead for up to 99 blocks 3-D machining <ul style="list-style-type: none"> • Superimpose handwheel positioning during program run
22	Pallet management	01	628255-01	Pallet management
23	Display step	01	632986-01	Display step to 0.01 µm or 0.00001°
24	Gantry axes	01	634621-01	Gantry axes combination in master-slave torque control

Option number	Option	As of NC software 340 56x-	ID	Comment
41	Additional languages	01	530 184-01 -02 -03 -04 -06 -07 -08 -09 -10	<ul style="list-style-type: none"> • Slovenian • Slovak • Latvian • Norwegian • Korean • Estonian • Turkish • Romanian • Lithuanian
46	Python OEM Process	01	579650-01	Python application on the TNC
48	KinematicsOpt	03	630916-01	Touch probe cycles for automatic measurement of rotary axes
49	Double speed	01	632223-01	Short control-loop cycle times for direct drives

Digital Control Design

Digital in every way

In the uniformly digital control design from HEIDENHAIN, all components are connected to each other via purely digital interfaces: The control components are connected via **HSCI** (HEIDENHAIN Serial Controller Interface), the new real-time protocol from HEIDENHAIN for Fast Ethernet, and the encoders are connected via **EnDat 2.2**, the bidirectional interface from HEIDENHAIN. This achieves a high degree of availability for the entire system. It can be diagnosed and is immune to noise—from the main computer to the encoder. These outstanding properties of the uniform digital design from HEIDENHAIN guarantee not only very high accuracy and surface quality, but rapid traverse speeds as well. Please refer to the *Uniformly Digital* Technical Information sheet for more detailed information.

HSCI

HSCI, the HEIDENHAIN Serial Controller Interface, connects the main computer, controller(s) and other control components. HSCI is based on 100BaseT Ethernet hardware. A special interface component developed by HEIDENHAIN has shortened cycle times for data transfer.

Main advantages of the control design with HSCI:

- Hardware platform for flexible and scalable control system (e.g. local axis systems)
- High noise immunity due to digital communication between components
- Greater cable lengths in the entire system (HSCI up to 70 m)
- More PLC inputs/outputs
- Simpler wiring (initial operation, configuration)
- Inverters remain connected via proven PWM interface

CC or UEC controller units, up to eight PL 6xxx input/output modules, and an MB machine operating panel can be connected to the serial HSCI bus of the MC main computer. The HR handwheel is connected directly to the machine operating panel.

The combination of visual display unit and main computer housed in the operating panel is especially advantageous. All that is required is the power supply and an HSCI line to the controller in the electrical cabinet.

The maximum permissible number of individual HSCI participants is:

HSCI components		Maximum number	
MC	HSCI master	1 in the system	
CC, UEC	HSCI slave	4 controller motherboards (distributed to CC, UEC as desired)	
MB 7xx, PLB 6001	HSCI slave	1 in the system	Total of up to 9 components
PLB 62xx	HSCI slave	1 in the system (not with UEC 11x)	
PLB 61xx	HSCI slave	7 in the system	
HR handwheel	On MB 7xx or PLB 6001	1 in the system	
PLD-H-xx-xx	In PLB 6xxx	64 in the system	

TNC 620 HSCI Control Systems

Overview

The TNC 620 contouring control includes various components, which can be selected and combined to fit the application.

		Type	Page
Main computer		Integrated keyboard	16
		Separate keyboard	
		MC 7110	MC 7120
	Processor	Celeron M	
Storage medium		CFR	17
NC software license		SIK component	18
Controller unit	Max. 6 control loops	CC 6106	19
Controller unit with integral inverter	Max. 4 control loops	UEC 111¹⁾	20
	Max. 5 control loops	UEC 112¹⁾	20
Power supply		PSL 130	24
Screen		15", integrated	16
Keyboard unit		Integrated	23
		TE 730/TE 720 or TE 735	
Machine operating panel		MB 720 (integrated in TE 735) or PLB 6001 (HSCI adapter for OEM operating panel)	23 27
PLC inputs/outputs¹⁾		Series PL 6xxx/PL 550	21
Connecting cables			31
Electronic handwheels		HR 410/HR 130 or HR 150	25
Touch probes	Workpiece measurement	TS 220/TS 440/TS 444/TS 640 or TS 740	30
	Tool measurement	TT 140 or TL	30

¹⁾ **Please note:**

The MC 6xxx main computer does not have any PLC inputs/outputs. Therefore one PL 62xx or one UEC 11x is required for each control. They feature safety-relevant inputs/outputs, and the connections for touch probes.

Main Computer

Main computer

The **MC 71xx** main computer includes:

- 1 GHz Celeron M microprocessor
- 1 GB SDRAM main memory
- *Only with MC 7110:* TNC operating panel with soft keys
- 15-inch TFT color flat-panel display; resolution: 1024 x 768 pixels
- HSCI interface to the controller unit and to other control components
- USB interface with cover cap in front
- *On MC 7120:* USB interface for the TE operating panel
- Further interfaces, such as Ethernet, USB 2.0, RS-232-CV.24 for use by the end user

To be ordered separately, and installed in the main computer by the OEM:

- **CFR** memory card with the NC software
- **SIK component** (System Identification Key) for enabling control loops and options

The following HSCI components are necessary for operation of the TNC 620:

- MC main computer
- Controller unit
- **PLB 62xx** PLC input/output unit (system PL; integrated in UEC 11x)
- **MB 720** machine operating panel (integrated in TE 735) or **PLB 6001** HSCI adapter for connection of an OEM machine operating panel

	Keyboard unit	Weight	Other Interfaces	ID
MC 7110	Integrated	7.8 kg	–	760 834-xx
			PROFIBUS DP	805 497-xx
MC 7120	Separate	5.4 kg	–	805 499-xx
			PROFIBUS DP	805 502-xx



MC 7110

Power supply

The UEC controller unit supplies 24 V DC of power to the main computer and other HSCI components. If the current consumption is greater than 3.5 A or a CC 6106 is used, then a PSL 130 power supply unit is also necessary.

Export version

Because the complete NC software is saved on the memory card, no export version is required for the main computer itself. Export versions are available only for the easily replaceable CFR memory card and the SIK component.



MC 7120

Options

The capabilities of the TNC 620 can also be adapted retroactively with options to meet new requirements. These options are described on page 12. They are enabled by entering keywords based on the SIK number, and are saved in the SIK component. Please indicate your SIK number when ordering new options.

Main Computer—CFR Memory Card, SIK Component

CFR CompactFlash The NC software for the TNC 620 is contained on the CFR CompactFlash memory card (CFR= CompactFlashRemovable). It is also the memory medium for NC programs (up to 300 MB) and the PLC program (up to 50 MB).

TNC 620	ID 617770-01
TNC 620 export version	ID 617770-51

SIK component The SIK component holds the NC software license for enabling control loops and software options. It gives the main computer an unambiguous ID code—the SIK number. The SIK component is ordered and shipped separately. It must be inserted in a special slot in the MC 71xx main computer.

The SIK component with the NC software license is available in various versions, depending on the enabled control loops. Additional control loops—**up to 6 control loops**—can be enabled later by entering a keyword. HEIDENHAIN provides the keyword, which is based on the SIK number. When ordering, please indicate the SIK number of your control. When the keywords are entered in the control, they are saved in the SIK component. This enables and activates the options. Should service become necessary, the SIK component must be inserted in the replacement control to enable all required options.

Master keyword (general key) There is a master keyword (general key) for putting the TNC 620 into service that will unlock all options for a duration of 90 days. After this period, only those options with the correct keywords will be active. The general key is activated using a soft key.

Software key Generator (accessory) The PC software makes it possible to generate an activation code for software options on HEIDENHAIN controls. The selected option is enabled for a limited time (10 to 90 days). It can only be enabled once. You generate the desired activation code by entering the SIK number, the option to be enabled, the duration and a manufacturer-specific password. The enabling is independent of the General Key.



SIK component

NC software license and enabling of control loops

There are always 4 control loops enabled in the basic version. The controller unit must be designed for the corresponding number of activated control loops. Maximum numbers:

- CC 6106: 6 control loops
- UEC 112: 5 control loops
- UEC 111: 4 control loops

You can find the usual SIK combinations in the following table. Other versions are available upon request.

NC software license for	SIK ID Standard version		Export version	
	Without software option	With software options 19 and 20	Without software option	With software options 19 and 20
4 control loops	526924-01	526924-04	526924-51	526924-54
5 control loops	526924-02	526924-05	526924-52	526924-55
6 control loops	526924-03	526924-06	526924-53	526924-56

Retroactive enabling of control loops

If additional control loops are required for retrofitted options, the controller unit must be capable of handling further control loops.

Control loop	ID
1st additional control loop	354540-01
2nd additional control loop	353904-01

Controller Unit

Controller unit

Due to the very short cycle times of the position, velocity and current controllers, the controller units from HEIDENHAIN are equally suited for conventional drives, for direct drives (linear motors, torque motors) and for HSC spindles. They permit a high loop gain and short reaction times to changing machining forces, and so make the high contour accuracy and surface quality of the workpiece possible.

Single speed, double speed (option 49)

Double-speed control loops (option 49) are preferred for controlling direct drives and HSC spindles. **Single-speed control loops** suffice for conventional drives. When switching from single speed to double speed, the number of available control loops is reduced by one each.

Cycle times

With f_{PWM}	Current controller	Speed controller		Position controller
		Single-speed	Double-speed	
3333 Hz	150 μs	300 μs	150 μs	Same as speed controller
4000 Hz	125 μs	250 μs	125 μs	
5000 Hz	100 μs	200 μs	100 μs	
6666 Hz ¹⁾	75 μs	150 μs	150 μs	
8000 Hz ¹⁾	60 μs	125 μs	125 μs	
10000 Hz ¹⁾	50 μs	100 μs	100 μs	

¹⁾ Possible only with option 49

Number of control loops

The number of enabled control loops depends on the SIK (see *Main Computer*), or on additionally enabled control loops, which can also be ordered as needed at a later date.

Versions

Controller unit and main computer operate in any desired combination. HEIDENHAIN offers the CC 6106 modular controller unit with PWM interface for the inverters and the UEC 11x compact controller units with integrated inverter.

CC 6106

The **CC 6106** controller unit features:

- Position controller, speed controller, current controller
- HSCI interfaces
- PWM interfaces to the UM, UR, UE power modules
- Interfaces to the speed encoders
- Interfaces to the position encoders
- Interfaces for current control (supplied via UVR, UE, UR)




CC 6106

	CC 6106
Digital control loops	Max. 6
Speed inputs	6 x 1 V _{PP} or EnDat 2.2
Position inputs	6 x 1 V _{PP} or EnDat 2.2
PWM outputs	6
Weight	4.1 kg
ID	662 636-xx

UEC 11x

The UEC 11x compact controller units not only include the controller with PLC inputs and outputs, but also an inverter with integrated braking resistor. They offer a complete solution for machines with a limited number of axes and low power demands.

- | | |
|------------|---|
| Controller | <ul style="list-style-type: none"> • Position controller, speed controller, current controller • HSCI interface • Interfaces to the speed and position encoders |
| Inverter | <ul style="list-style-type: none"> • Power electronics • Connections for axis motors and spindle motor • Braking resistor • Connections for motor holding brakes |
| System PL | <ul style="list-style-type: none"> • Interfaces for one workpiece touch probe and one tool touch probe • PLC with 38 freely available inputs and 23 outputs (7 of these outputs can be switched off), expandable via PL 61xx • Configuration with IOconfig PC software |

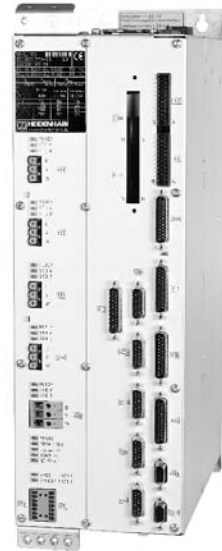

		UEC 111			UEC 112		
Controller		4 digital control loops			5 digital control loops		
Speed inputs		4 x 1 V _{PP} or EnDat 2.2			5 x 1 V _{PP} or EnDat 2.2		
Position inputs		4 x 1 V _{PP} or EnDat 2.2			5 x 1 V _{PP} or EnDat 2.2		
Inverter		<i>2 axes</i>	<i>1 axis</i>	<i>Spindle</i>	<i>3 axes</i>	<i>1 axis</i>	<i>Spindle</i>
Rated current I_N/ Max. current I_{max}¹⁾ at PWM frequency	3333 Hz	6.0/12.0 A	9.0/18.0 A	24.0/36.0 A	6.0/12.0 A	9.0/18.0 A	24.0/36.0 A
	4000 Hz	5.5/11.0 A	8.3/16.5 A	22.0/33.0 A	5.5/11.0 A	8.3/16.5 A	22.0/33.0 A
	5000 Hz	5.0/10.0 A	7.5/15.0 A	20.0/30.0 A	5.0/10.0 A	7.5/15.0 A	20.0/30.0 A
	6666 Hz	4.2/8.4 A	6.3/12.6 A	16.8/25.2 A	4.2/8.4 A	6.3/12.6 A	16.8/25.2 A
	8000 Hz	3.6/7.3 A	5.5/11.0 A	14.6/21.9 A	3.6/7.3 A	5.5/11.0 A	14.6/21.9 A
	10000 Hz	3.0/6.0 A	3.0/6.0 A	12.2/18.3 A	3.0/6.0 A	3.0/6.0 A	12.2/18.3 A
Power supply		3AC 400 V to 480 V (± 10 %); 50 Hz to 60 Hz					
Rated power of DC link		14 kW			14 kW		
Peak power ²⁾ of DC link		18 kW / 25 kW			18 kW / 25 kW		
Power loss at I _N (approx.)		450 W			450 W		
DC-link voltage		565 V DC			565 V DC		
Integral braking resistance		2.1 kW/27 kW			2.1 kW/27 kW		
Power pack for HSCI components		24 V DC/3.5 A			24 V DC/3.5 A		
Module width		175 mm			175 mm		
Weight (approx.)		20 kg			20 kg		
ID		625777-xx			625779-xx		

1) Axes: 0.2 s Cyclic duration factor for duty cycle time of 10 s with 70 % rated current preload
 Spindle: 10 s Cyclic duration factor for duty cycle time of 60 s with 70 % rated current preload
 2) 1st value: 40 % Cyclic duration factor for duty cycle time of 10 minutes (S6-40 %)
 2nd value: 4 s Cyclic duration factor for duty cycle time of 20 s

PL 6xxx PLC Input/Output Systems with HSCI

The PLC inputs and outputs are available via external modular PL 6xxx PLC input/output systems. These consist of a basic module and one or more I/O modules, and are connected to the MC main computer via the HSCI interface. The PL 6xxx units are configured with the PC software IOconfig.

Basic modules

There are basic modules with **HSCI interface** available for 4, 6 or 8 I/O modules. They are mounted on standard NS 35 rails (DIN 46227 or EN 50022).

Supply voltage	24 V DC
Power consumption	Approx. 48 W at 24 V DC NC Approx. 21 W at 24 V DC PLC
Weight	0.36 kg (bare)

System PL

- Necessary once for each control system (except with UEC)
- Includes connections for TS and TT touch probes, as well as TL
- Safety-relevant inputs/outputs

PLB 6204	For 4 I/O modules	ID 591832-03
PLB 6206	For 6 I/O modules	ID 630054-03
PLB 6208	For 8 I/O modules	ID 630055-03

Expansion PL

For connection to the system PL to increase the number of PLC inputs/outputs

PLB 6104	For 4 I/O modules	ID 591832-03
PLB 6106	For 6 I/O modules	ID 630058-03
PLB 6108	For 8 I/O modules	ID 630059-03

Up to eight PL 6000 units can be connected to the control (one PLB 62xx or UEC 11x and up to seven PLB 61xx). The maximum cable length results from the maximum permissible length of the HSCI chain of 70 m.

I/O modules

For HSCI:

There are I/O modules with digital and analog inputs and outputs. For partially assembled basic modules, the unused slots must be occupied by an empty housing.

PLD-H 16-08-00	I/O module with 16 digital inputs and 8 digital outputs
PLD-H 08-16-00	I/O module with 8 digital inputs and 16 digital outputs
Total current	Outputs 0 to 7: ≤ 2 A per output (≤ 8 A simultaneously)
Power output	Max. 200 W
Weight	0.2 kg
PLD-H 16-08-00	ID 594243-02
PLD-H 08-16-00	ID 650891-02

PLA-H 08-04-04

Analog module for PL 6xxx with

- 8 analog inputs, ± 10 V DC
- 4 analog outputs, ± 10 V DC
- 4 analog inputs for PT 100 thermistors

Weight	0.2 kg
ID	675572-01

Empty housing

For unused slots

ID	383022-11
----	-----------

IOconfig

(accessory)

IOconfig PC software for configuring HSCI and PROFIBUS components.



PLB 62xx

PL 550 PLC Input/Output Systems for PROFIBUS-DP

PLC inputs and outputs are also available via the external modular PL 550 PLC input/output system. It consists of a basic module and one or more I/O modules, and is connected to the MC main computer via the PROFIBUS-DP interface. The PLC I/O modules are configured with the PC software IOconfig. The PROFIBUS-DP board must be installed in the MC 6xxx before the PLB 550 is connected to the control.

Basic modules

With PROFIBUS-DP interface

PLB 550

Basic module with PROFIBUS-DP interface
Slots for 4 I/O modules
The PLB 550 serves as a PROFIBUS slave. A total of 32 slaves can be connected to the MC 6xxx with integrated PROFIBUS interface board (PROFIBUS single master). They are mounted on standard NS 35 rails (DIN 46227 or EN 50022).

Supply voltage	24 V DC
Power consumption	Approx. 20 W
Weight	0.36 kg (bare)
ID	507872-01

I/O modules

For PROFIBUS-DP

The I/O modules for PL 550 consist of one module with digital inputs/outputs and one analog module. For partially assembled basic modules, the unused slots must be occupied by an empty housing.

PLD 16-8

I/O module for PL 550 with 16 digital inputs and 8 digital outputs. The max. power output per module is 200 W. A load of up to 2 A can be placed on each output. No more than four outputs may be loaded with 2 A at any given time.

Weight	0.2 kg
ID	360916-11

PLA 4-4

Analog module for PL 550 with
4 analog inputs for PT 100 thermistors
4 analog inputs for ± 10 V

Weight	0.2 kg
ID	366423-01

Empty housing

For unused slots	
ID	383022-01

IOconfig (accessory)

IOconfig PC software for configuring HSCI and PROFIBUS components.



PL 550

Machine Operating Panel

Machine operating panel MB 720

- Power supply 24 V DC/approx. 4 W
- 36 exchangeable snap-on keys, freely definable via PLC
- Status LEDs on each key, addressable via PLC
- Operating elements:
 - 12 axis keys
 - 24 function keys
 - NC start¹⁾
 - NC stop¹⁾
 - Spindle start, spindle stop (replaceable)
 - EMERGENCY STOP key
 - Control voltage On¹⁾
 - Two holes for additional keys or keylock switches
- HSCI interface
- 7 free PLC inputs and 5 free PLC outputs

¹⁾ Keys illuminated, addressable via PLC

ID	784 803-01
Weight	Approx. 0.9 kg




MB 720

Keyboard for MC 7120

TE 730 keyboard

- For MC 7120
- Axis keys
- Contouring keys
- Operating mode keys
- ASCII keyboard
- Spindle-speed and feed-rate override potentiometers
- USB interface to MC 6xxx
- Touchpad

ID	805 489-01
Weight	Approx. 2.4 kg

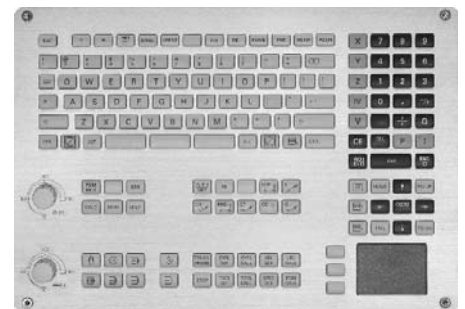

TE 730

TE 720 keyboard


Same features as TE 730, but without touchpad

ID	805 488-01
----	------------

TE 735 keyboard unit with integrated machine operating panel

- For MC 7120
- NC keyboard same as TE 630
- USB interface to MC 6xxx
- Machine operating panel (operating elements same as MB 720)
- HSCI interface
- 7 free PLC inputs and 5 free PLC outputs

ID	771 898-01
Weight	Approx. 3 kg

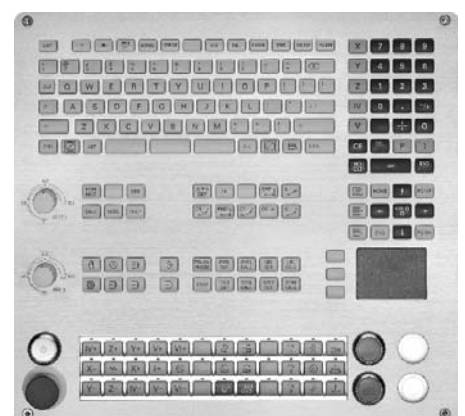

TE 735

Power Supply for HSCI Components

To power the HSCI components, HEIDENHAIN offers the PSL 130 power supply unit.

The PSL 130 is provided either with line and DC-link voltage or only with line voltage.

The PSL 130 provides the safely separated +24 V DC NC power supply required for the HSCI components by EN 61 800-5-1. The NC supply voltage and the PLC supply voltage are separated from each other by basic insulation.

Supply voltage	Line voltage: 400 V AC \pm 10 % 50 Hz and DC-link voltage: 400 V DC to 750 V DC Power consumption: Max. 1000 W
Outputs	NC: 24 V DC \leq 20 A (double insulation from line power) 5 V DC \leq 16 A (only with PSL 135) electrically connected with 24 V NC PLC: 24 V DC \leq 20 A (basic insulation from line power) Total: Max. 32 A/750 W

The **PSL 130** serves as a 24 V DC power supply unit for supplying the HSCI components. If a UEC controller unit is used, then the PSL 130 is not necessary if the total current consumption of the connected HSCI components does not exceed 3.5 A.

PSL 130



HSCI component		Current consumption 24 V DC NC
Main computer	MC 7110 MC 7120	1.8 A 2.5 A
Operating panel	TE 735	0.2 A (without handwheel)
Machine operating panel	PLB 6001 MB 720	0.2 A (without handwheel) 0.2 A (without handwheel)
PLC inputs/outputs	PLB 62xx PLB 61xx PLD PLA	0.3 A (without touch probe) 0.2 A 0.05 A 0.1 A
Handwheels	HR 410 HR 130 HR 110 + 3 x HR 150	0.05 A 0.05 A 0.2 A
Touch probes	See specifications of the touch probes	

	Module width	Degree of protection	Weight	ID
PSL 130	50 mm	IP 20	2.1 kg	575047-03

Accessories

Electronic Handwheels

Support of electronic handwheels is standard on the TNC 620. The following handwheels can be installed:

- One **HR 410** portable handwheel or
- One **HR 130** panel-mounted handwheel, or
- Up to three **HR 150** panel-mounted handwheels via the **HRA 110** handwheel adapter

Handwheels are connected to the MB machine operating panel or the PLB 6001 adapter for HSCI.

HR 410

Portable electronic handwheel with

- Keys for the selection of 5 axes
- Traverse direction keys
- Keys for three preset feed rates
- Actual-position-capture key
- Three keys with machine functions (see below)
- Two permissive buttons (24 V)
- Emergency stop button (24 V)
- Holding magnets

All keys are designed as snap-on keys and can be replaced by keys with other symbols. (For key symbols see *Snap-On Keys*.)

Weight Approx. 1 kg

HR 410 model	Mechanical detent	
	With	Without
Standard assignment with the FCT A, FCT B, FCT C function keys	–	296469-53
For PLC basic program with NC start/stop, spindle start	535220-05	296469-55
With spindle right/left/stop	–	296469-54



HR 130

Panel-mounted handwheel with ergonomic control knob. It is connected to the logic unit directly or via extension cable.

Weight Approx. 0.7 kg

HR 130 without mechanical detent ID 540940-03
 HR 130 with mechanical detent ID 540940-01



HRA 110

Handwheel adapter for connection of up to three **HR 150** panel-mounted handwheels and two switches for axis selection and for selecting the interpolation factor. The first two handwheels are permanently assigned to axes 1 and 2. The third handwheel is assigned to the axes over a step switch (accessory) or by machine parameters. The position of the second step switch (accessory) is evaluated by the PLC, for example to set the proper interpolation.



HRA 110

ID 261 097-04
Weight Approx. 1.5 kg

Handwheel selection switch with knob and cable
ID 270908-xx



HR 150

Panel-mounted handwheel with ergonomic control knob for connection to the **HRA 110** handwheel adapter.

Weight Approx. 0.7 kg
HR 150 without mechanical detent ID 540940-07
HR 150 with mechanical detent ID 540940-06




HSCI Adapter for the OEM Machine Operating Panel

The PLB 6001 HSCI adapter is required in order to connect an OEM-specific machine operating panel to the TNC 620 HSCI. The spindle-speed and feed-rate override potentiometers of the TE 7xx and the HR handwheel are also connected to this adapter.

PLB 6001

- HSCI interface
- Connection for HR handwheel
- Terminals for 64 inputs and 32 outputs (inputs/outputs for keys/key illumination)
- Connection for spindle speed override and feed-rate override
- Screw fastening or DIN-rail mounting
- Configuration of the PLC inputs/outputs with the IOconfig PC software

Weight Approx. 1.2 kg
ID 668792-01

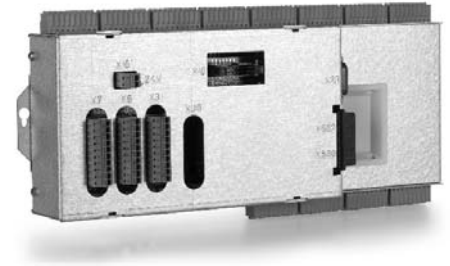

Module for Analog Axes

Digital drive designs sometimes also require analog axes or spindles. The additional module CMA-H 04-04-00 (Controller Module Analog – HSCI) makes it possible to integrate analog servo drives in an HSCI system. However, all of the interpolating axes must be either analog or digital. Mixed operation is not possible.

The CMA-H is connected to the HSCI control system through a slot on the underside of the CC or UEC. Every controller unit has slots for two boards. The CMA-H does not increase the total number of available axes: Every analog axis used reduces the number of available digital control loops by one. Analog control loops also need to be enabled on the SIK. The analog control-loop outputs can only be accessed via the NC, and not via the PLC.

CMA-H 04-04-00

- Additional module for analog axes/spindles
- Expansion board for CC 61xx or UEC 11x controller units
 - 4 analog outputs ± 10 V axes/spindle
 - Spring-type plug-in terminals

ID 688721-01





Snap-On Keys For Control















The snap-on keys make it easy to replace the key symbols. In this way, the keyboard can be adapted to different requirements. The snap-on keys are available in packs of 5 keys.

Axis keys














Orange

	ID 679 843-31				
	ID 679 843-32				












Gray

	ID 679 843-03		ID 679 843-12		
	ID 679 843-04		ID 679 843-13		
	ID 679 843-05		ID 679 843-14		
	ID 679 843-06		ID 679 843-43		
	ID 679 843-07		ID 679 843-44		
	ID 679 843-08				
	ID 679 843-09				
	ID 679 843-10				
	ID 679 843-11				










Machine functions

	ID 679 843-01		ID 679 843-26		
	ID 679 843-02		ID 679 843-27		
	ID 679 843-16		ID 679 843-28		
	ID 679 843-22		ID 679 843-29		
	ID 679 843-23		ID 679 843-30		
	ID 679 843-24		ID 679 843-40		
	ID 679 843-25				

Spindle functions

	ID 679 843-18		ID 679 843-21		ID 679 843-48		ID 679 843-51
	ID 679 843-19		ID 679 843-46		ID 679 843-49		ID 679 843-52
	ID 679 843-20		ID 679 843-47		ID 679 843-50		

Other keys

	ID 679 843-15		ID 679 843-39		
	ID 679 843-17		ID 679 843-41		
	ID 679 843-36		ID 679 843-42		
	ID 679 843-37		ID 679 843-45		
	ID 679 843-38				

Snap-on keys for HR 410

The snap-on keys make it easy to replace the key symbols. In this way, the HR 410 handwheel can be adapted to different requirements. The snap-on keys are available in packs of 5 keys.

Axis keys

Orange

	ID 330 816-42		ID 330 816-24		ID 330 816-43		ID 330 816-37
	ID 330 816-26		ID 330 816-36		ID 330 816-38		
	ID 330 816-23		ID 330 816-25		ID 330 816-45		

Gray

	ID 330 816-95		ID 330 816-69		ID 330 816-0W		ID 330 816-0R
	ID 330 816-96		ID 330 816-0G		ID 330 816-0V		ID 330 816-0D
	ID 330 816-97		ID 330 816-0H		ID 330 816-0N		ID 330 816-0E
	ID 330 816-98		ID 330 816-71		ID 330 816-0M		ID 330 816-65
	ID 330 816-99		ID 330 816-72		ID 330 816-67		ID 330 816-66
	ID 330 816-0A		ID 330 816-63		ID 330 816-68		ID 330 816-19
	ID 330 816-0B		ID 330 816-64		ID 330 816-21		ID 330 816-16
	ID 330 816-0C		ID 330 816-18		ID 330 816-20		ID 330 816-0L
	ID 330 816-70		ID 330 816-17		ID 330 816-0P		ID 330 816-0K

Machine functions

	ID 330 816-0X		ID 330 816-75		ID 330 816-0T		ID 330 816-86
	ID 330 816-1Y		ID 330 816-76		ID 330 816-81		ID 330 816-87
	ID 330 816-30		ID 330 816-77		ID 330 816-82		ID 330 816-88
	ID 330 816-31		ID 330 816-78		ID 330 816-83		ID 330 816-94
	ID 330 816-32		ID 330 816-79		ID 330 816-84		ID 330 816-0U
	ID 330 816-73		ID 330 816-80		ID 330 816-89		ID 330 816-91
	ID 330 816-74		ID 330 816-0S		ID 330 816-85		ID 330 816-3L

Spindle functions

	ID 330 816-08		ID 330 816-40		(red) ID 330 816-47		ID 330 816-48
	ID 330 816-09		ID 330 816-41		(green) ID 330 816-46		ID 385 530-5X

Other keys

	ID 330 816-01		ID 330 816-50		ID 330 816-90		ID 330 816-93
	ID 330 816-61		ID 330 816-33		ID 330 816-27		ID 330 816-0Y
	(green) ID 330 816-11		ID 330 816-34		ID 330 816-28		ID 330 816-4M
	(red) ID 330 816-12		ID 330 816-35		ID 330 816-29		ID 330 816-3M
	ID 330 816-49		ID 330 816-22		ID 330 816-92		ID 330 816-3N

Touch Probes

Touch probes for workpiece measurement are connected via the system PL 62xx or the UEC 11x. These touch probes generate a trigger signal that saves the current position value to the NC. For more information on the touch probes, ask for our brochure or CD-ROM entitled *Touch Probes*.

Workpiece measurement

The TS touch trigger probe has a stylus with which it probes workpieces. The TNC provides standard routines for datum setting and workpiece measurement and alignment. The touch probes are available with various taper shanks. Assorted styli are available as accessories.

Touch probe with **cable connection for signal transmission** for machines with manual tool change:

TS 220 TTL version

Touch probe with **infrared signal transmission** for machines with automatic tool change:

TS 440 Compact dimensions

TS 444 Compact dimensions, battery-free power supply through integrated air turbine generator over central compressed air supply

TS 640 Standard touch probe with wide-range infrared transmission and long operating time

TS 740 High probing accuracy and repeatability, low probing force

The infrared transmission is established between the TS touch probe and the SE transceiver unit. The following SE units can be combined with the TS touch probes:

SE 640 for integration in the machine's workspace
SE 540 for integration in the spindle head

Tool measurement

The touch probes for tool measurement from HEIDENHAIN are suited for probing stationary or rotating tools directly on the machine. The TNC has standard routines for measuring length and diameter of the tool as well as the individual teeth. The TNC automatically saves the results of measurement in a tool table. It is also possible to measure tool wear between two machining steps. The TNC compensates the changed tool dimensions automatically for subsequent machining or replaces the tool after a certain limit—as for example after tool breakage.

TT 140 With the triggering **TT 140 touch probe** the disk-shaped contact plate is deflected from its rest position upon contact with a stationary or rotating tool, sending a trigger signal to the NC control.

TL Micro/TL Nano The **TL laser systems** operate without any contact. A laser beam probes the length, diameter or contour of the tool. Special measuring cycles in the TNC evaluate the information.



TS 220



TS 640 with SE 640




TT 140





TL Micro 150,
TL Micro 300

Control System with CC 6106; Separate Keyboard

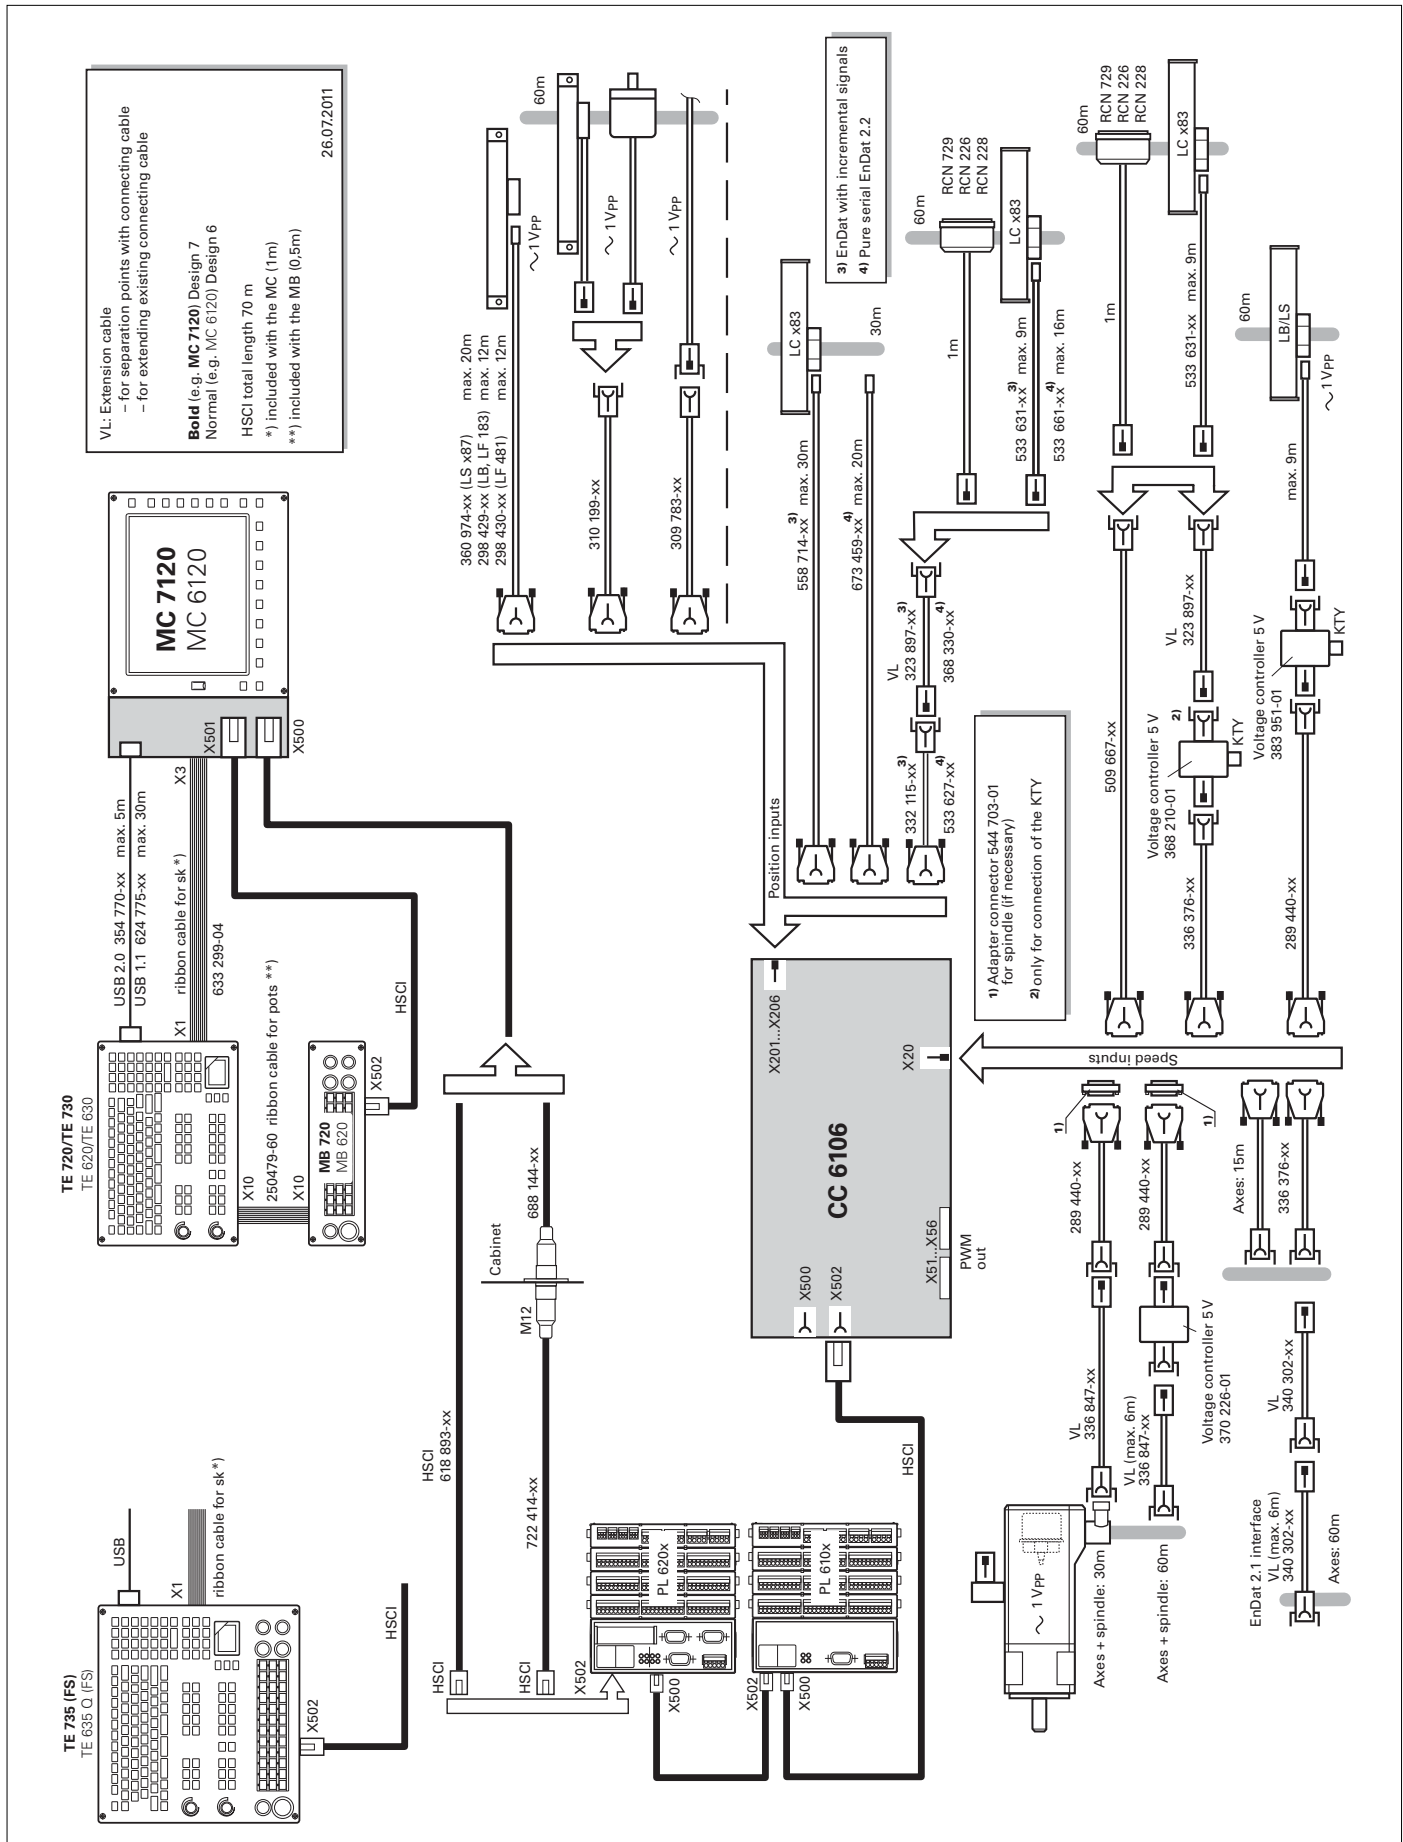

Inverter Systems

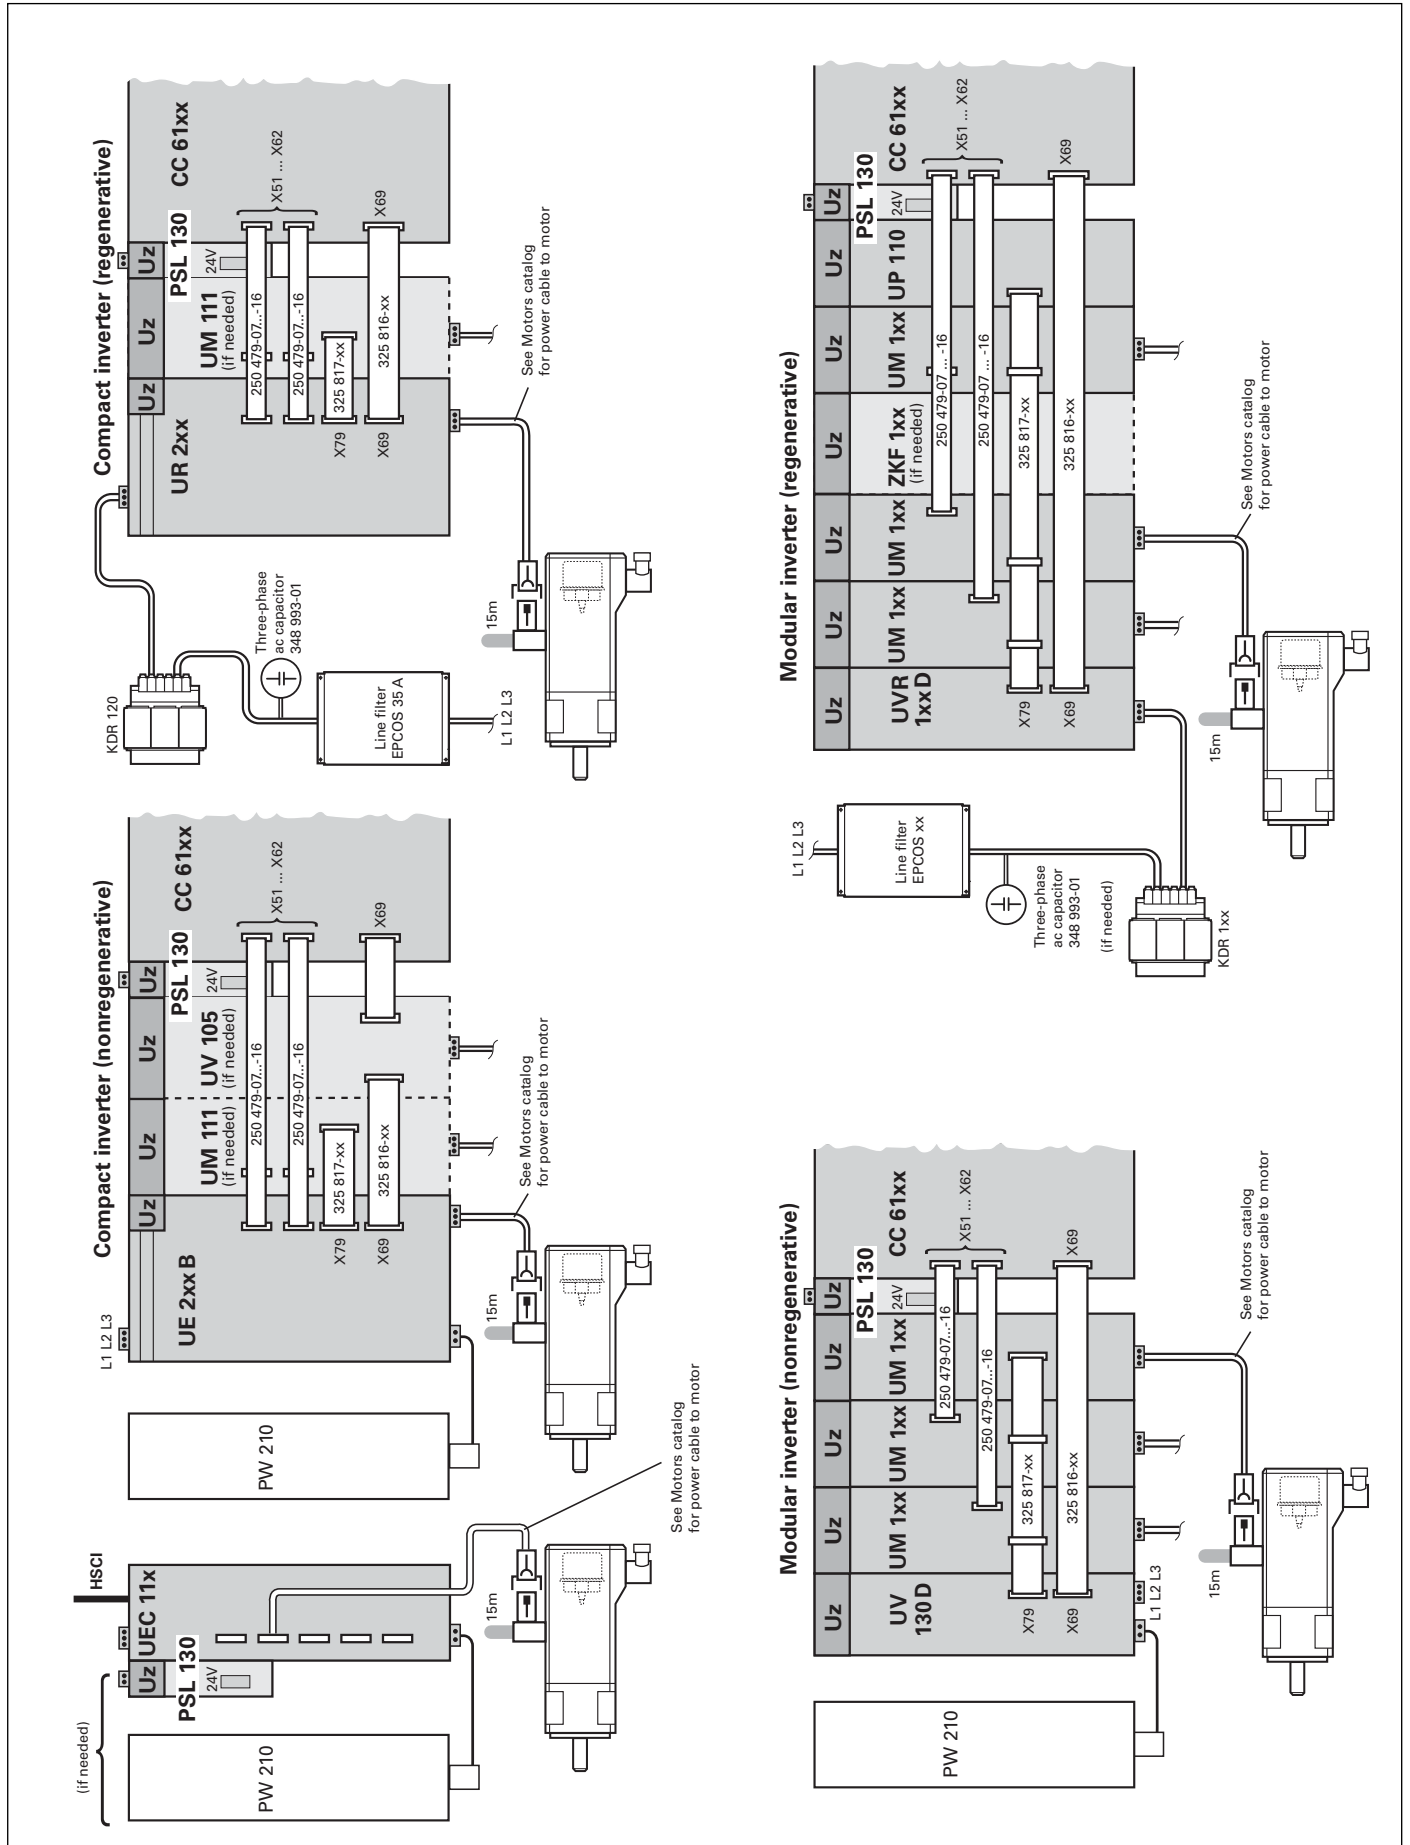


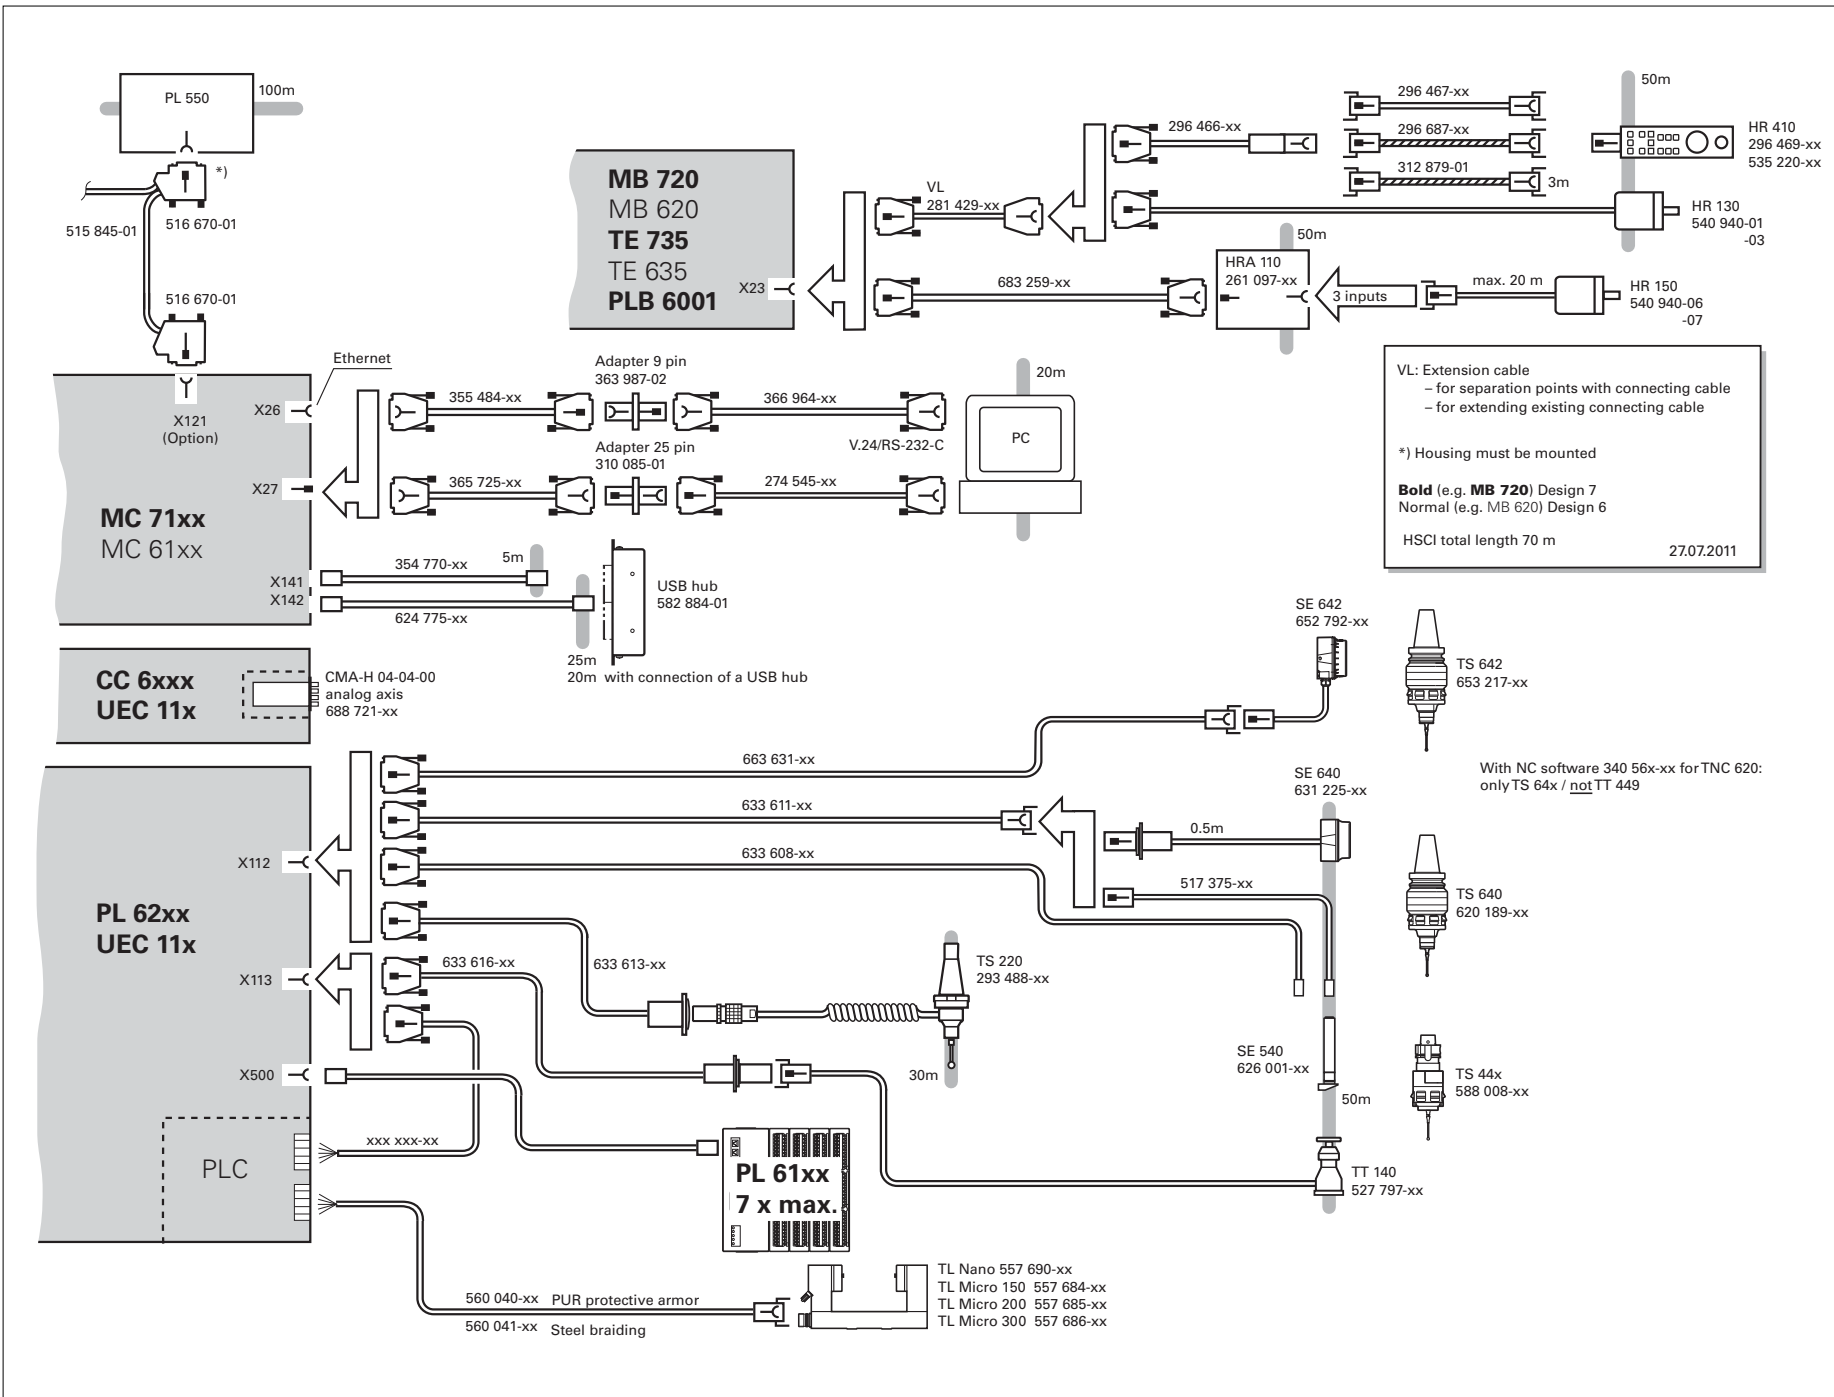

Technical Description

Axes


Linear axes	Depending on the options enabled, the TNC 620 can control linear axes with any axis designation (X, Y, Z, U, V, W...).
Display and programming	-99999.999 to +99999.999 [mm] -99999.99999 to +99999.99999 [mm] with option 23 Feed rate in mm/min relative to the workpiece contour, or mm per spindle revolution Feed rate override: 0 to 150 %
Traverse range	-99999.999 to +99999.999 [mm] -99999.99999 to +99999.99999 [mm] with option 23 The machine tool builder defines the traverse range. The user can set additional limits to the traverse range if he wishes to reduce the working space. Different traverse ranges can be defined for each axis via parameter blocks (selection by PLC).
Rotary axes	The TNC 620 can control rotary axes with any axis designation (A, B, C, U...).
	Special parameters and PLC functions are available for rotary axes with Hirth coupling.
Display and programming	0° to 360° or -99999.999 to +99999.999 [°] -99999.99999 to +99999.99999 [°] with option 23 Feed rate in degrees per minute (°/min)
Traverse range	-99999.999 to +99999.999 [°] -99999.99999 to +99999.99999 [°] with option 23 The machine tool builder defines the traverse range. The user can set additional limits to the traverse range if he wishes to reduce the working space. Different traverse ranges can be defined for each axis via parameter blocks (selection by PLC).
Free rotation	For milling-turning operations, the rotary axis can be started via the PLC with a defined feed rate.
Cylindrical surface interpolation (option 8)	A contour defined in the working plane is machined on a cylindrical surface.
Axis clamping	The control loop can be opened through the PLC in order to clamp specific axes.

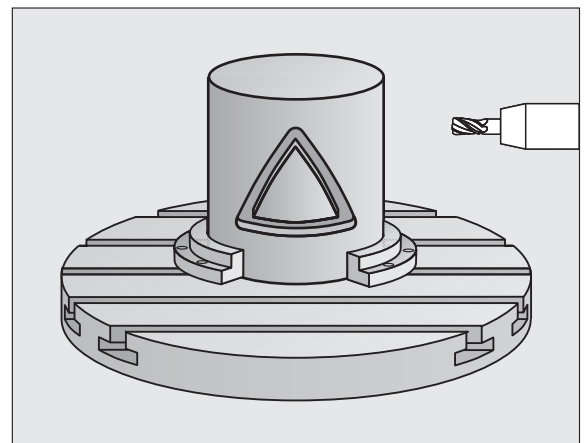

Tilting the working plane
(option 8)

The TNC 620 has special coordinate transformation cycles for controlling swivel heads and tilting tables. The offset of the tilting axes and the tool lengths are compensated by the TNC.


The TNC 620 can manage more than one machine configuration (e.g. different swivel heads).

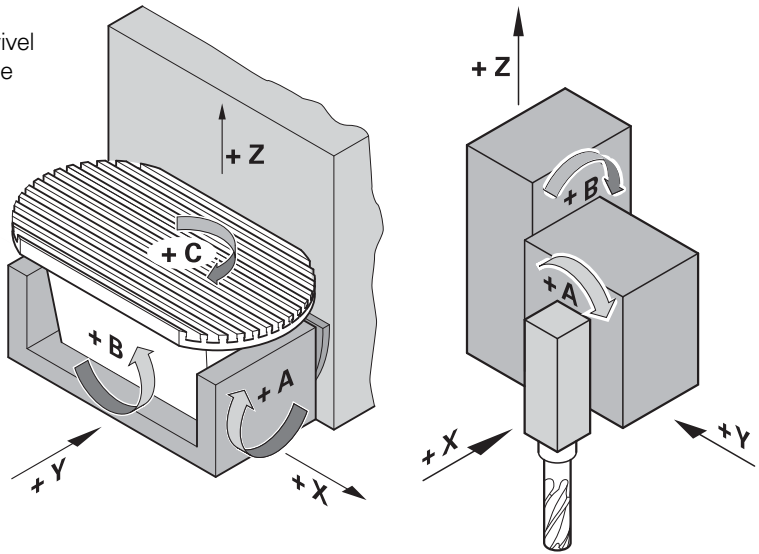

5-axis machining
(option 9)


Tool center point management (TCPM)

The offset of the tilting axes is compensated so that the tool tip remains on the contour. Handwheel commands can also be superimposed during machining without moving the tool tip from the programmed contour.

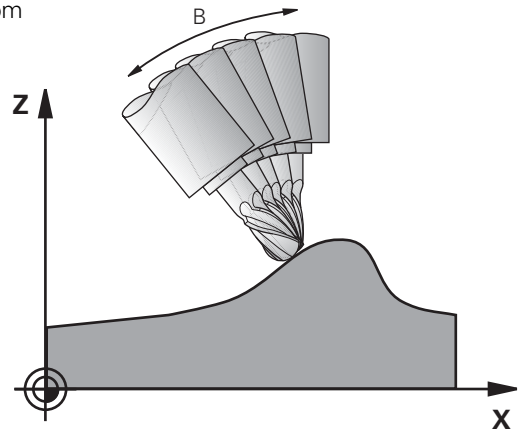

Synchronized axes
(option 24)

Synchronous axes are moved simultaneously and are programmed with the same axis designation, e.g. gantry axes or tandem tables.

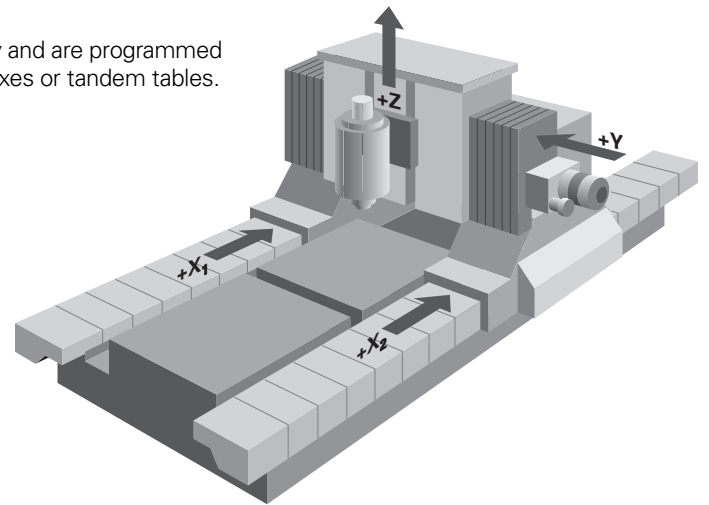


Torque control
(option 24)

Torque control is used on machines with mechanically coupled motors for which

- a defined distribution of drive torque is desired,

or


- parts of the controlled system show a backlash effect that can be eliminated by "tensioning" the servo drives, (e.g. toothed racks).

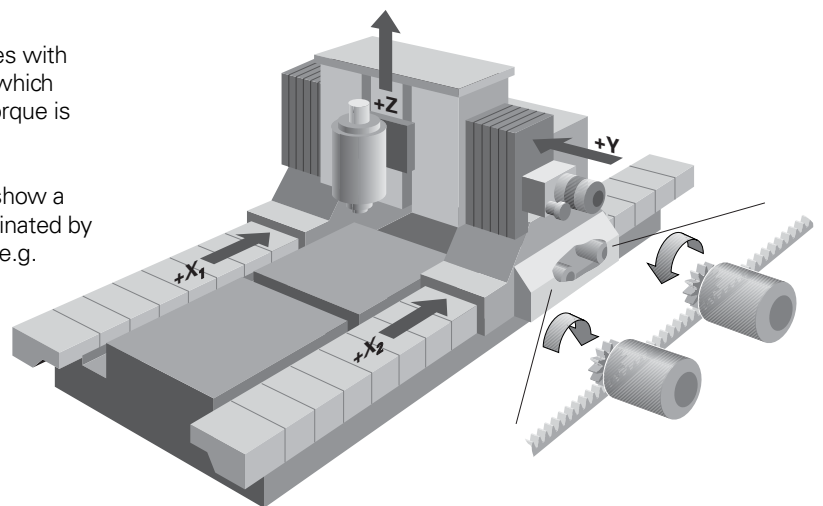

PLC axes


Axes can be controlled by the PLC. They are programmed over M functions or OEM cycles.

The PLC axes are positioned independently of the NC axes and are therefore designated as asynchronous axes.

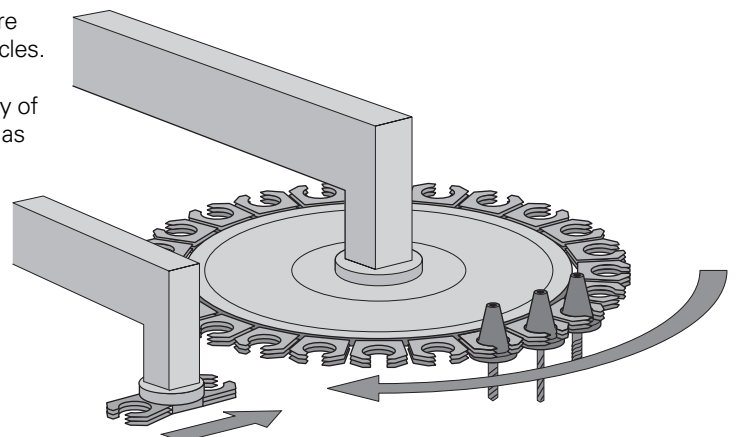

Digital Closed-Loop Control

Integrated inverters Position controllers, speed controllers, current controllers and inverters are integrated in the TNC 620. HEIDENHAIN synchronous and asynchronous motors are connected to the TNC 620.

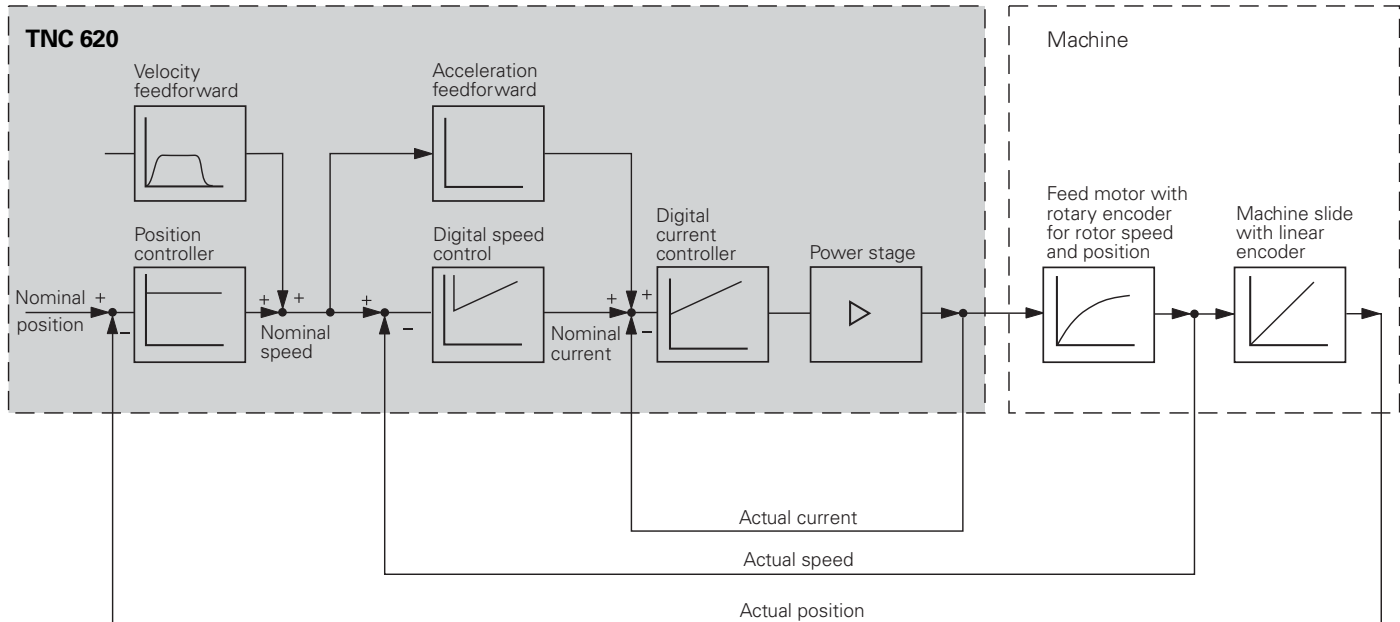

Axis feedback control The TNC 620 can be operated with following error or feedforward control. During roughing operations at high speeds, for example, you can switch to velocity semi-feedforward control via an OEM cycle in order to machine faster at reduced accuracy.

Servo control with following error The term “following error” denotes the distance between the momentary nominal position and the actual position of the axis.

The velocity is calculated as follows:

$$v = k_v \cdot s_a$$

v = velocity
 k_v = position loop gain
 s_a = following error

Servo control with feedforward Feedforward means that the speed and the acceleration are adjusted to fit the machine. Together with the values calculated from the following error, it forms the nominal value. This greatly reduces the following error (to within a few μm).


Compensation of torque ripples The torque of synchronous, torque and linear motors is subject to periodic oscillations, one cause of which can be permanent magnets. The amplitude of these oscillations depends on the motor design, and under certain circumstances can have an effect on the workpiece surface. After the axes have been commissioned with the TNCopt software, the Torque Ripple Compensation (TRC) of the CC 6106 or UEC 11x can be used to compensate this torque ripple.

Control-loop cycle times

The cycle time for **path interpolation** is defined as the time interval during which interpolation points on the path are calculated. The cycle time for **fine interpolation** is defined as the time interval during which interpolation points are calculated that lie between the interpolation points calculated for path interpolation. The cycle time for the **position controller** is defined as the time interval during which the actual position value is compared to the calculated nominal position value. The cycle time for the **speed controller** is defined as the time interval during which the actual speed value is compared to the calculated nominal speed value. The cycle time for the **current controller** is defined as the time interval during which the actual current value is compared to the calculated nominal current value.

	CC 6xxx/UEC 11x
Path interpolation	3 ms
Fine interpolation	0.2 ms/0.1 ms ¹⁾
Position controller	0.2 ms/0.1 ms ²⁾
Speed controller	0.2 ms/0.1 ms ¹⁾
Current controller	0.1 ms at $f_{PWM} = 5000$ Hz

1) Double-speed (with option 49) without position encoder
 2) Single-speed/double-speed (with option 49)

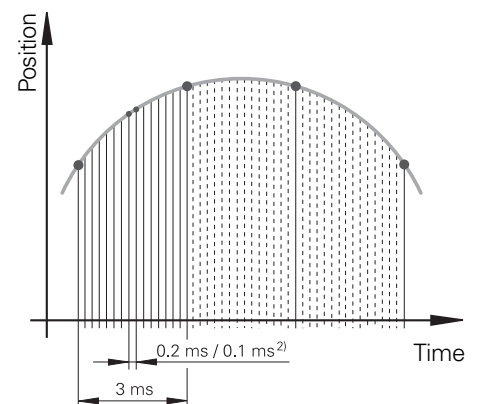

Double-speed control loops (option 49)

Double-speed control loops permit higher PWM frequencies as well as shorter cycle times of the speed controller. This makes improved current control for spindles possible, and also higher control performance for linear and torque motors.

Jerk

The derivative of acceleration is referred to as jerk. A linear change in acceleration causes a jerk step. Such motion sequences may cause the machine to oscillate.


Jerk limiting

To prevent machine oscillations, the jerk is limited to attain optimum path control.

Smoothed jerk

The jerk is smoothed by nominal position value filters. The TNC 620 therefore mills smooth surfaces at the highest possible feed rate and yet keeps the contour accurate. The operator programs the permissible tolerance in a cycle.

Special filters for HSC machining (HSC filters) can specifically suppress the natural frequencies of an individual machine. The desired accuracy is attained with the very high surface quality.

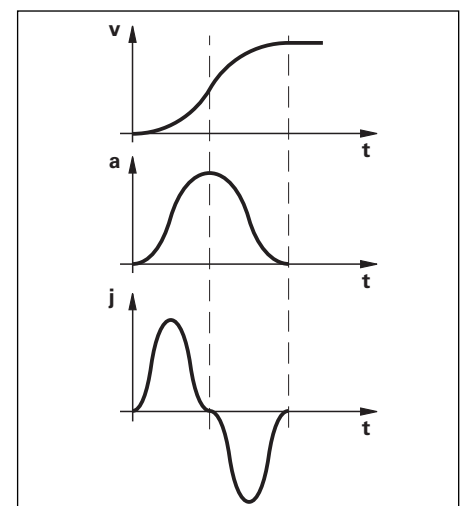

Fast Contour Milling


Short block processing times

The TNC 620 provides the following important features for fast contour machining:

The block processing time of the MC 6110 is 1.5 ms. This means that the TNC 620 is able to run long programs from the memory card, even with contours approximated with linear segments as small as 0.2 mm, at a feed rate of up to 24 m/min.

Look-ahead

The TNC 620 calculates the geometry ahead of time in order to adjust the feed rate (max. 5000 blocks). In this way directional changes are detected in time to accelerate or decelerate the appropriate NC axes.

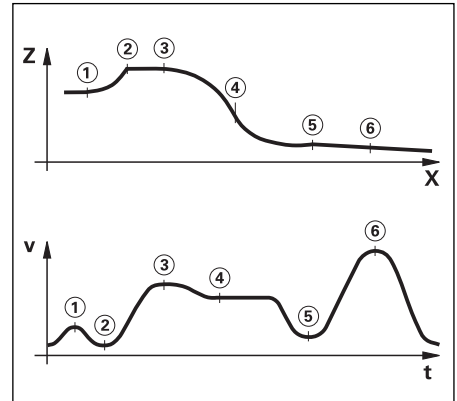

Machine Configuration

A control must have access to specific machine data (e.g. traverse distances, acceleration, speeds) before it can execute its programmed instructions. These data are defined in machine parameters. Every machine has its own set of parameters.

Structured organization of machine parameters

The TNC 620 features a simplified configuration editor. The machine parameters are displayed on the control's screen in a clear tree structure. Move through the structure with the TNC operating panel or a USB mouse. The parameters are entered in windows, much like on a PC.



As an alternative, the configuration editor can display a table view. The table view is especially beneficial when configuring the parameter sets, since you can see the parameters of all axes at a glance.

Quick access using MP numbers

Each machine parameter has a unique 6-digit MP number. The GOTO function can be used for quick access to any machine parameter.



Encoders

For speed and position control of the axes and spindle, HEIDENHAIN offers both incremental as well as absolute encoders.

Incremental encoders

Incremental encoders have as measuring standard a grating consisting of alternate lines and spaces. Relative movement between the scanning head and the scale causes output of sinusoidal signals. The measured value is calculated from these signals.

Reference mark


When the machine is switched on, the machine axes need to traverse a reference mark for an accurate reference to be established between measured value and machine position. For encoders with distance-coded reference marks, the maximum travel until automatic reference mark evaluation for linear encoders is only 20 mm or 80 mm, depending on the model, or 10° or 20° for angle encoders.

Reference mark evaluation

The routine for traversing the reference marks can also be started for specific axes via the PLC during operation (reactivation of parked axes).

Output signals

Incremental encoders with sinusoidal output signals with $\sim 1 V_{PP}$ levels are suitable for connection to HEIDENHAIN numerical controls.

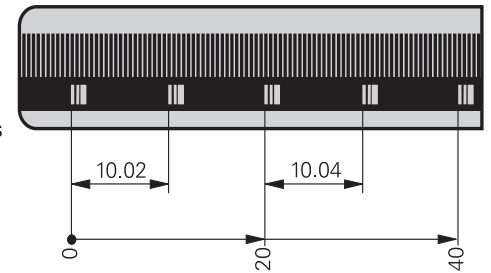

Absolute encoders

With absolute encoders, the position information is contained in several coded tracks. Thus, an absolute reference is available immediately after switch-on. Reference-mark traverse is not necessary. Additionally, incremental signals can be output, depending on the interface.

EnDat interface

The TNC 620 is fitted with the serial EnDat 2.2 (includes EnDat 2.1) interface for the connection of absolute encoders.

Note: The EnDat interface on HEIDENHAIN encoders differs in its pin assignment from the interface on Siemens motors with integrated absolute ECN/EQN rotary encoders. Special adapter cables are available.

Encoder inputs

Incremental and absolute linear, angle or rotary encoders from HEIDENHAIN can be connected to all **position encoder** inputs of the controller unit.

Incremental and absolute rotary encoders from HEIDENHAIN can be connected to all **speed encoder** inputs of the controller unit.

Inputs	Signal level/ Interface ¹⁾	Input frequency ¹⁾	
		Position	Speed
Incremental signals	$\sim 1 V_{PP}$	33 kHz/ 350 kHz	350 kHz
Absolute position values	EnDat 2.2 ²⁾ /02	–	–
Incremental signals	$\sim 1 V_{PP}$	33 kHz/ 350 kHz	350 kHz
Absolute position values	EnDat 2.2 ²⁾ /22	–	–

¹⁾ Switchable

²⁾ EnDat 2.2 includes EnDat 2.1

Types of Error Compensation


The TNC 620 automatically compensates mechanical errors on the machine.

Linear error

Linear error can be compensated over the entire travel range for each axis.

Nonlinear error

The TNC 620 can compensate for ball-screw pitch errors and sag errors simultaneously. The compensation values are stored in a table.

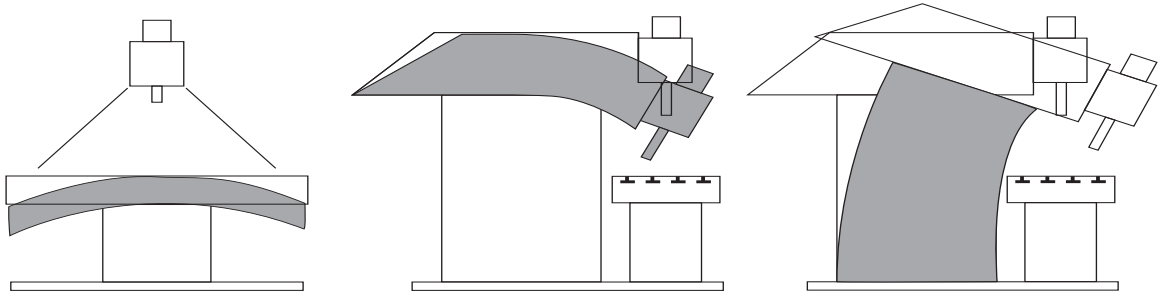

Backlash

The play between table movement and rotary encoder movement on direction changes can be compensated in length measurements by spindle and rotary encoder. This backlash is outside the controlled system.

Hysteresis

The hysteresis between table movement and motor movement is also compensated in length measurements. In this case the hysteresis is within the controlled system.

Reversal spikes

In circular movements, reversal peaks can occur at quadrant transitions due to mechanical influences. The TNC 620 can compensate for these reversal peaks.

Static friction

At very low feed rates, high static friction can cause the slide to stop and start repeatedly for short periods. This is commonly known as stick-slip. The TNC 620 can compensate for this problem condition.

Sliding friction

Sliding friction is compensated by the speed controller of the TNC 620.

Thermal expansion

To compensate thermal expansion, the machine's expansion behavior must be known.

The temperature can be recorded via temperature measurement thermistors connected to the analog inputs of the TNC 620. The PLC evaluates the temperature information and transfers the compensation value to the NC.

KinematicsOpt
(option 48)

Using the KinematicsOpt function, machine tool builders or end users can check the accuracy of rotary or swivel axes, and compensate for possible displacements of the center of rotation of these axes. The deviations are automatically transferred to the kinematics description and can be taken into account in the kinematics calculation.

In order to measure the rotary axes, you must attach a calibration sphere (e.g. KKH 100 or KKH 250 from HEIDENHAIN) at any position on the machine table. A HEIDENHAIN touch probe uses a special cycle to probe this calibration sphere, and measures the rotary axes of the machine fully automatically. But first you define the resolution of the measurement and define for each rotary axis the range that you want to measure. The results of measurement are the same regardless of whether the axis is a rotary table, a tilting table or a swivel head.

Calibration sphere
(accessory)

HEIDENHAIN offers calibration spheres as accessories for the measurement of rotary axes with KinematicsOpt:

- KKH 100** Height 100 mm ID 655475-02
- KKH 250** Height 250 mm ID 655475-01



Monitoring Functions

During operation, the TNC 620 monitors a number of parameters:

- Amplitude of the encoder signals
 - Edge separation of the encoder signals
 - Absolute position for encoders with distance-coded reference marks
 - Current position (following error monitoring)
 - Actual path traversed (movement monitoring)
 - Position deviation at standstill
 - Nominal speed value
 - Checksum of safety-related functions
 - Supply voltage
 - Buffer battery voltage
 - Operating temperature of the MC and CPU
 - Running time of the PLC program
 - Motor current and temperature
 - Temperature of power module
 - DC-link voltage
- With EnDat 2.2 encoders:*
- CRC checksum of the position value
 - EnDat-Alarm Error1 → EnDat status alarm register (0xEE)
 - EnDat alarm Error2
 - Edge speed of 5 μs
 - Transmission of the absolute position value on the time grid

In the case of hazardous errors, an EMERGENCY STOP message is sent to the external electronics via the control-is-ready output, and the axes are brought to a stop. The correct connection of the TNC 620 into the machine's EMERGENCY STOP loop is checked when the control system is switched on. In the event of an error, the TNC 620 displays a message in plain language.

Context-sensitive help

The HELP and ERR keys provide the user with context-sensitive help. This means that in the event of an error message, the TNC 620 displays information on the cause of the error and proposes solutions. The machine manufacturer can also use this function for PLC error messages.

KinematicsDesign (accessory)

KinematicsDesign is a PC program for creating adaptable kinematic configurations. It supports:


- Complete kinematic configurations
- Transfer of configuration files between control and PC

When used with the iTNC 530, KinematicsDesign provides further conveniences:

- Assignment table
- Kinematics description table
- Kinematics subfile description table
- Tool-carrier kinematics description table
- Definition table for collision-monitored objects (CMO)
- Configuration and initial operation of Dynamic Collision Monitoring (DCM; option 40)

If KinematicsDesign is connected with a control online (operation is also possible with the programming station software), then machine movements can be simulated graphically along with axis traverse. With the iTNC 530, when DCM is active the workpiece space is also simulated and any collisions or collision-endangered objects are displayed in a definable color.

Depending on the control involved, the visualization capabilities include the pure depiction of the transformation sequence and even wire models or a complete representation of the working envelope on the iTNC 530.

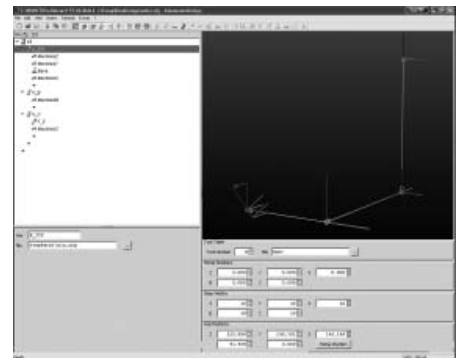

Spindle

The TNC 620 contouring control is used in connection with the HEIDENHAIN inverter systems with field-oriented control.

CC 6106 controller unit With the CC 6106 controller unit, the PWM basic frequency can be set for each controller assembly (e.g. 4 kHz). Possible basic frequencies are 3.33 kHz, 4 kHz or 5 kHz. The **Double Speed** option (option 49) can double this frequency for high-speed spindles (e.g. 8 kHz for HF spindles), (See the *TNC 620 Technical Manual*).

Controller groups
1: X51 + X52
2: X53 + X54
3: X55 + X56

Maximum spindle speed The maximum spindle speed is calculated as follows:

$$n_{\max} = \frac{f_{\text{PWM}} \cdot 60000 \text{ min}^{-1}}{\text{NPP} \cdot 5000 \text{ Hz}}$$

f_{PWM} = PWM frequency in Hz
NPP = Number of pole pairs

Operating-mode switchover Various parameter blocks can be stored for controlling the spindle (e.g. for wye/delta connection). You can switch between the parameter blocks in the PLC.

Position-controlled spindle The position of the spindle is monitored by the TNC 620.

Encoder HEIDENHAIN rotary encoder with sinusoidal voltage signals (1 V_{PP}) or EnDat interface.

Tapping There are special cycles for tapping with or without floating tap holder. For tapping without floating tap holder, the spindle must be operated under position control.

Oriented spindle stop With a position-controlled spindle, the spindle can be positioned exactly to 0.1°.

Spindle override 0 to 150 %

Gear ranges A specific nominal speed can be defined for each gear range. The gear code is output via the PLC.

Second spindle Up to two spindles can be alternately controlled. You can switch from spindle 1 to spindle 2 through the PLC. Because the second spindle is controlled instead of an axis, the number of available axes is reduced by one.

Commissioning and Diagnostic Aids

The TNC 620 provides comprehensive internal commissioning and diagnostic aids. In addition, highly effective PC software for diagnosis, optimization and remote control is available.

ConfigDesign (accessory)


- PC software for configuring the machine parameters
- Machine-parameter editor for the control; all support information; additional data and input limits are shown for each parameter
 - Configuration of machine parameters
 - Comparison of parameters from different controls
 - Importing of service files: easy testing of machine parameters in the field
 - Rule-based creation and management of machine configurations for multiple controls (together with PLCdesign)

DriveDiag

DriveDiag permits quick and easy troubleshooting of the drives. The following diagnostic functions are available:

- Reading and displaying the electronic ID labels of QSY motors with EQN 13xx or ECN 13xx as well as the inverter modules UVR 1xxD and UM 1xxD
- Displaying and evaluating the internal control conditions and the status signals of the inverter components
- Displaying the analog values available to the drive controller
- Automatic test for proper function of motors and inverters, of position encoders and speed encoders

DriveDiag can be called directly from the TNC 620 via the Diagnosis soft key. It is also available for downloading as PC software (accessory) from the HEIDENHAIN FileBase on the Internet. End users have read-access, whereas the code number for the machine tool builder gives access to comprehensive testing possibilities with DriveDiag.

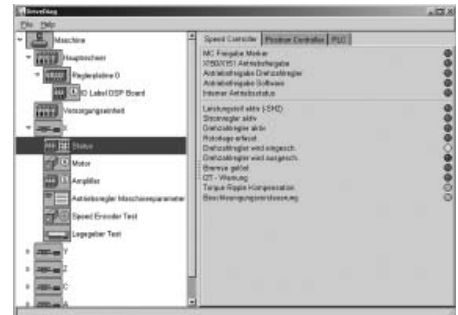

TNCopt (accessory)

PC software for commissioning digital control loops


Functions:

- Commissioning of the current controller
- (Automatic) commissioning of the speed controller
- (Automatic) optimization of sliding-friction compensation
- (Automatic) optimization of the reversal-peak compensation
- (Automatic) optimization of kV factor
- Circular interpolation test, contour test

Requirements

DriveDiag and TNCopt place the following demands on the PC:

- Windows 2000/XP/Vista operating system
- At least 15 MB of free hard-disk space
- Serial or Ethernet interface

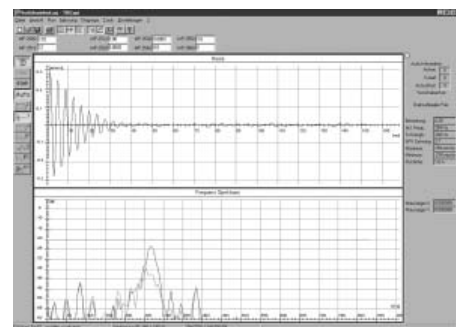

OLM Online monitor

The online monitor (OLM) supports the commissioning and diagnosis of control components through:


- Display of control-internal variables for axes and channels
- Display of controller-internal variables (if a CC is present)
- Display of hardware signal states
- Various trace functions
- Activation of spindle commands
- Enabling control-internal debug outputs

The online monitor is a component part of the TNC 620 and is called by a code number.

Oscilloscope

The TNC 620 features an integrated oscilloscope. Both X/t and X/Y graphs are possible. The following characteristic curves of six channels can be recorded and saved:


- Actual value of axis feed rate
- Nominal value of axis feed rate
- Contouring feed rate
- Actual position
- Nominal position
- Following error of the position controller
- Nominal values for speed, acceleration and jerk
- Actual values for speed, acceleration and jerk
- Content of PLC operands
- Encoder signal (0° – A)
- Encoder signal (90° – B)
- Difference between position and speed encoder
- Nominal velocity value
- Integral-action component of the nominal current value
- Torque-determining nominal current value

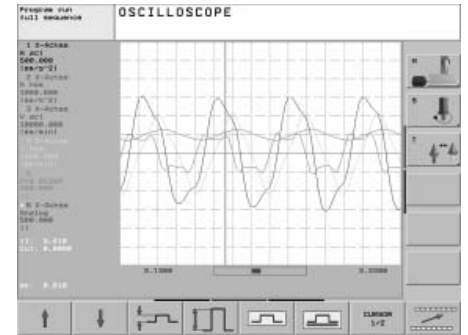

Logic signals

Simultaneous graphic representation of the logic states of up to 16 operands (markers, words, inputs, outputs, counters, timers)

- Marker (M)
- Input (I)
- Output (O)
- Timer (T)
- Counter (C)
- IpoLogic (X)

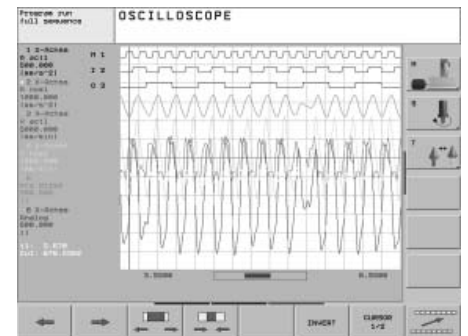

TNCscope (accessory)

PC software for transferring the oscilloscope files to the PC.
Note: The trace files are saved in the TNCscope data format.

API DATA

The API DATA function enables the control to display the states or contents of the symbolic API markers and API double words. This function requires that your PLC program use the new symbolic memory interface.

Note:

The API DATA function does not provide usable display values with the iTNC 530-compatible memory interface (API 1.0).

Table function

The current conditions of the markers, words, inputs, outputs, counters and timers are displayed in tables. The conditions can be changed through the keyboard.

Trace function

The current content of the operands and the accumulators is shown in the instruction list in each line in HEX or decimal code. The active lines of the instruction list are marked.

Log

For the purposes of error diagnosis, there is one log for all error messages and one for all keystrokes.

TeleService (accessory)

PC software for remote diagnosis, remote monitoring, and remote control of the TNC 620. For further information, ask for the *Remote Diagnosis with TeleService* Technical Information sheet.

Bus diagnostics

In Diagnosis mode, the structure of the HSCI/PROFIBUS system as well as the details of the HSCI/PROFIBUS components can be displayed in a clearly laid out screen. For HSCI components this is possible even to the level of the terminals

Integral PLC

The PLC program is created by the machine manufacturer either with the PLC development software **PLCdesign** (accessory) or at the control with an external PC keyboard with a USB connection.

Machine-specific functions are activated and monitored via the PLC inputs/outputs. The number of PLC inputs/outputs required depends on the complexity of the machine.

PLC Inputs/ Outputs

PLC inputs and outputs are available via the external PL 6xxx PLC input/output systems or the UEC 11. The PLC inputs/outputs and the PROFIBUS-DP-capable input/output system must be configured with the PC software IOconfig.

PLC programming


Format	Statement list
Memory	50 MB
Cycle time	Typically 21 ms, adjustable
Instruction set	<ul style="list-style-type: none">• Bit, byte and word commands• Logical operations• Arithmetical commands• Comparisons• Nested calculations (parentheses)• Jump commands• Subroutines• Stack operations• Submit programs• 952 timers• 48 counters• Comments• PLC modules• 100 strings

PLC window

The TNC 620 can display PLC error messages in the dialog line during operation.

Small PLC window

The TNC 620 can show additional PLC messages and bar diagrams in the small PLC window.

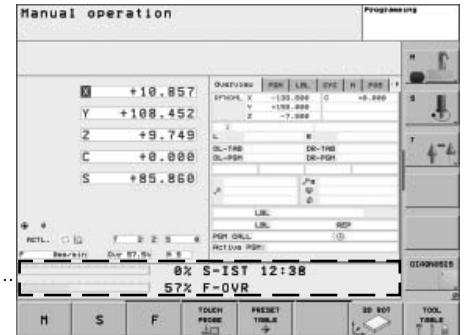


Small PLC window

PLC soft keys

The machine manufacturer can display his own PLC soft keys in the vertical soft-key row on the screen.

PLC positioning

All closed-loop axes can be also positioned via the PLC. PLC positioning of the NC axes cannot be superimposed on NC positioning.

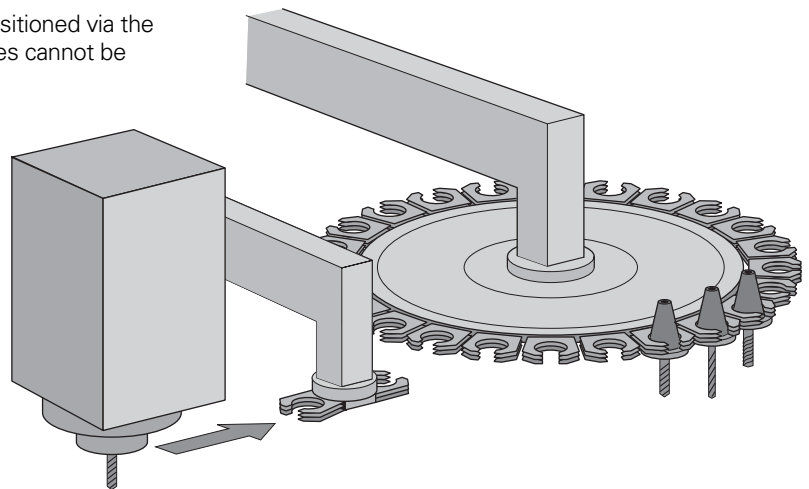

PLC axes

Axes can be controlled by the PLC. They are programmed by M functions or OEM cycles. The PLC axes are positioned independently of the NC axes.

PLCdesign
(accessory)

PC software for PLC program development. **PLCdesign** can be used to easily create PLC programs. Comprehensive examples of PLC programs are included.

Functions:

- Easy-to-use text editor
- Menu-guided operation
- Programming of symbolic operands
- Modular programming method
- "Compiling" and "linking" of PLC source files
- Operand commenting, creation of a documentation file
- Comprehensive help system
- Data transfer between the TNC 620 and the PC
- Creation of PLC soft keys

PC requirements:

- Windows 2000/XP/Vista/7 operating system
- At least 20 MB free memory on the hard disk
- Serial interface; Ethernet interface recommended
- Internet Explorer

Python OEM process
(option 46)

The Python OEM Process option is an effective tool for the machine tool builder to use an object-oriented high-level programming language in the control (PLC).

Python is an easy-to-learn script language that supports the use of all necessary high-level language elements.

Python OEM Process can be universally used for machine functions and complex calculations, as well as to display special user interfaces.

User-specific or machine-specific solutions can be efficiently implemented. Numerous libraries on the basis of Python and GTK are available, regardless of whether you want to create special algorithms for special functions, or separate solutions such as an interface for machine maintenance software.

The applications created can be included via the PLC in the familiar PLC windows, or they can be displayed in separate free windows that can be expanded to the TNC's full screen size.



PLC basic program The PLC basic program serves as a basis for adapting the TNC 620 to the requirements of the respective machine. Registered customers can download it from the Internet.

These essential functions are covered by the PLC basic program:

- Controlling all axes
- Clamped axes
- Homing the axes; reference end positions
- Positioning the axes after reference run
- Compensating the axis temperature
- Feed rate control
- Controlling and orienting the spindle
- Activating tool-specific torque monitoring
- Tool changer
- Pallet changer (translational, rotatory, setup functions)
- Vertical PLC soft-key row
- Displaying and managing PLC error messages
- Status display in the small PLC window
- Hydraulic control
- Control of the coolant system (internal, external, air)
- Handling M functions
- Lubrication
- Chip conveyor
- Operation of the second spindle alternately with the first
- Wye/delta connection switchover (static, dynamic)
- S-coded spindle
- 3-D head with C-axis operation
- Positioning the spindle as an axis
- Operation with clamped axes
- Axes with central drive
- Axes with Hirth grid
- Indexing fixture
- PLC log
- Touch probes
- PLC support for handwheels
- Control of doors

OEM Cycles (Option 19)

The machine manufacturer can create and store his own cycles for recurring machining tasks. These OEM cycles are used in the same way as standard HEIDENHAIN cycles.

CycleDesign (accessory)

The soft-key structure for the OEM cycles are managed using the **CycleDesign** PC program. In addition, CycleDesign can be used to store help graphics and soft keys in BMP format on the memory card of the TNC 620.

Graphic files can be compressed to ZIP format to reduce the amount of memory used.

Tool Management

With integral PLC, the tool changer is moved either via proximity switch or as a controlled axis. The TNC 620 takes on the tool management including tool-life monitoring and replacement tool monitoring.

Tool measurement (option 17)

Tools can be measured and checked using the TT 140 tool touch probe (accessory). The TNC 620 provides standard cycles for automatic tool measurement. The TNC 620 calculates the probing feed rate and the optimal spindle speed. The measured data is stored in a tool table.



Touch-Probe Configuration (Option 17)


All touch-probe data can be configured conveniently through a table. All HEIDENHAIN touch probe systems are preconfigured and can be selected through a drop-down menu.



Pallet Management (Option 22)

Pallet movement can be controlled via PLC axes. The order of movement, as well as pallet and workpiece datums, must be defined in the pallet table by the user.

The pallet table is freely configurable, which means that any information can be stored in the tables and called up later by the PLC.

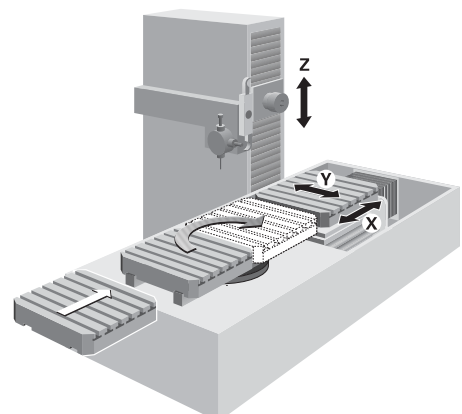

Data Interfaces

The TNC 620 is connected to PCs, networks and other data storage devices via data interfaces.

Ethernet

The TNC 620 can be interconnected via the Ethernet interface. The TNC 620 features a 100BaseT Ethernet (Twisted Pair Ethernet) connection to the data network.

Maximum transmission distance:

Unshielded 100 m

Shielded 400 m

Protocol The TNC 620 communicates using the TCP/IP protocol.

Network connection

- NFS file server
- Windows networks (SMB)

Data transfer rate Approx. 40 to 80 Mbps (depending on file type and network utilization)

RS-232-C/V.24 Data interface according to DIN 66020 or EIA standard RS-232-C. Maximum transmission distance: 20 m

Data transfer rate 115200; 57600; 38400; 19200; 9600; 4800; 2400; 1200; 600; 300; 150; 110 bps

Protocols The TNC 620 can transfer data using various protocols.

Standard data transfer The data is transferred character by character. The number of data bits, stop bits, the handshake and character parity must be set by the user.

Blockwise data transfer The data is transferred blockwise. A block check character (BCC) is used for testing data integrity. This method ensures greater data security.

LSV2 Bidirectional transfer of commands and data according to DIN 66019. The data is divided into blocks and transferred.

Adapter block For connecting the interface to the electrical cabinet or operating panel

RS-232-C/V.24 adapter	9-pin ID 363987-02
	25-pin ID 310085-01

USB

The MC 71x0 features three USB 2.0 ports for the connection of standard USB devices, such as a mouse, drives, etc. Two are on the back of the control, and one is on the front. A cover cap protects it from contamination. The USB ports are rated for a maximum supply current of 0.5 A.

USB cable

Cable length up to 5 m	ID 354770-xx
Cable length 6 m to 30 m with integrated amplifier; USB 1.1.	ID 624775-xx

USB hub

If you need further USB ports or if the supply current is not sufficient, a USB hub is required. The USB hub from HEIDENHAIN offers four free USB ports.

Power supply: 24 V DC / max. 300 mA
ID 582884-02

Cover The USB hub can be installed in the operating panel in such a way that two USB ports can be accessed from the outside. An optionally available cover cap can be used to protect the ports from contamination.

ID 508921-01



Software for Data Transfer

TNCremo (accessory)

This PC software package helps the user to transfer data from the PC to the TNC 620. The software on the PC transfers data block-wise with block check character (BCC).

Functions:

- Data transfer (also blockwise)
- Remote control (only serial)
- File management and data backup of the TNC 620
- Reading out the log
- Print-out of screen contents
- Text editor
- Managing more than one machine

Requirements:

- Windows 2000/XP/Vista/7 operating system
- At least 10 MB free hard-disk space
- Serial or Ethernet interface

TNCremoPlus (accessory)

In addition to the features you are already familiar with from TNCremo, TNCremoPlus can also transfer the current content of the control's screen to the PC (live screen). This makes it very simple to monitor the machine.

ID 340447-xx

DNC Applications

The development environments on Windows operating systems are particularly well suited as flexible platforms for application development in order to come to terms with the increasingly complex requirements of the machine's environment. The flexibility of the PC software and the large selection of ready-to-use software components and standard tools in the development environment enable you to develop PC applications of great use to your customers in a very short time, for example:

- Error reporting systems that, for example, send the customer a text message to his cell phone reporting problems on the currently running machining process
- Standard or customer-specific PC software that decidedly increases process security and equipment availability
- Software solutions controlling the processes of manufacturing systems
- Information exchange with job management software

HEIDENHAIN DNC (option 18)



The **HEIDENHAIN DNC** software interface is an attractive communication platform for this purpose. It provides all the data and configuration capabilities needed for these processes so that an external PC application can evaluate data from the control and, if required, influence the manufacturing process.

RemoTools SDK (accessory)

To enable you to use HEIDENHAIN DNC effectively, HEIDENHAIN offers the **RemoTools SDK** development package. It contains the COM components and the ActiveX control for integration of the DNC functions in development environments.

ID 340442-xx

For more information, refer to the brochure *HEIDENHAIN DNC*.

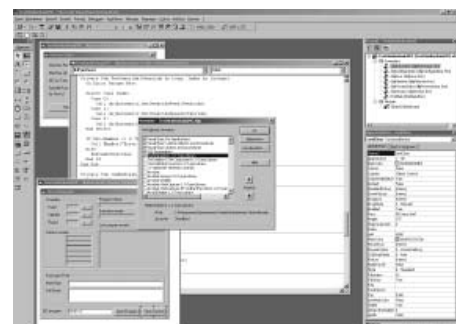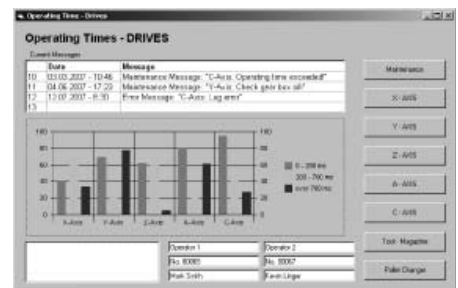

Mounting Instructions

Installation

When installing the TNC 620, take note of the minimum spacing, space needed for servicing, and the appropriate length and location of the connecting cables.

Mounting and electrical installation

Keep the following in mind during mounting and electrical installation:

- National regulations for power installations
- Interference and noise immunity
- Conditions of operation
- Mounting attitude

Degrees of protection

The following components fulfill the requirements for IP 54 (dust protection and splash-proof protection):

- Visual display unit (when properly installed)
- Keyboard unit (when properly installed)
- Machine operating panel (when properly installed)
- Handwheel

All electric and electronic control components must be installed in an environment (e.g. electrical cabinet, housing) that fulfills the requirements of protection class IP54 (dust and splash-proof protection) in order to fulfill the requirements of contamination level 2.

All components of the OEM operating panel must also comply with protection class IP54, just like the HEIDENHAIN operating panel components.

Electromagnetic compatibility

Intended place of operation

The unit fulfills the requirements for a Class A device in accordance with the specifications in EN 55022, and is intended for use in industrially zoned areas.

Protect your equipment from interference by observing the rules and recommendations specified in the Technical Manual.


Likely sources of interference

Interference is mainly produced by capacitive and inductive coupling from electrical conductors or from device inputs/outputs, such as:


- Strong magnetic fields from transformers or electric motors
- Relays, contactors and solenoid valves
- High-frequency equipment, pulse equipment and stray magnetic fields from switch-mode power supplies
- Power lines and leads to the above equipment





Protective measures

- Keep a minimum distance of 20 cm from the TNC 620 and its leads to devices that carry interference signals.
- Keep a minimum distance of 10 cm from the TNC 620 and its leads to cables that carry interference signals. For cables in metallic ducting, adequate decoupling can be achieved by using a grounded separation shield.
- Shielding according to EN 50178
- Use potential compensating lines with a cross section of 6 mm^2
- Use only genuine HEIDENHAIN cables, connectors and couplings

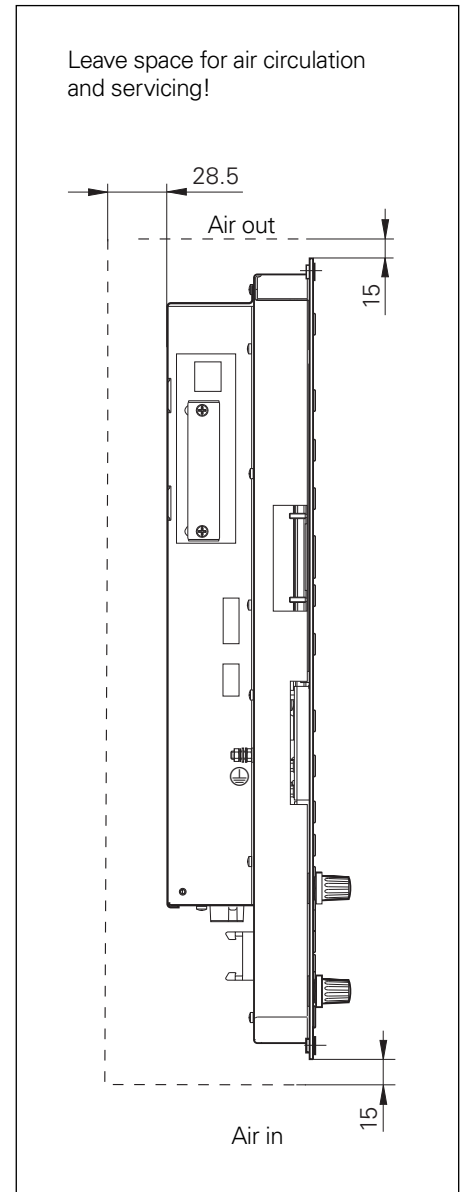





MC 7120

mm

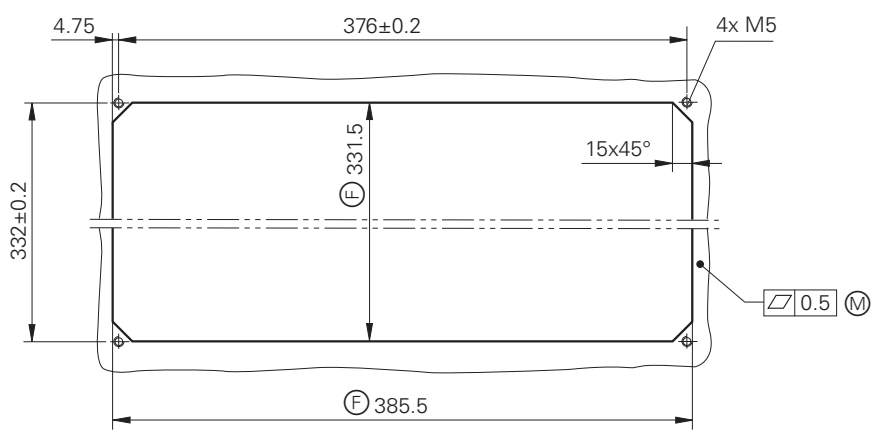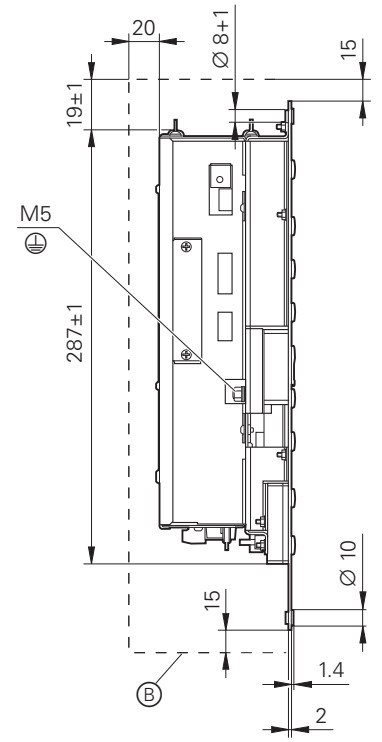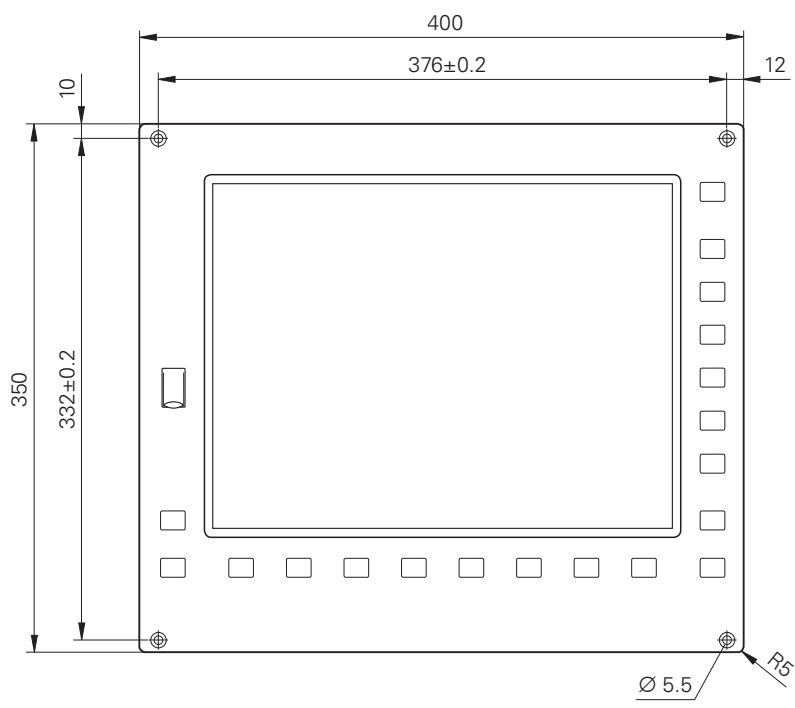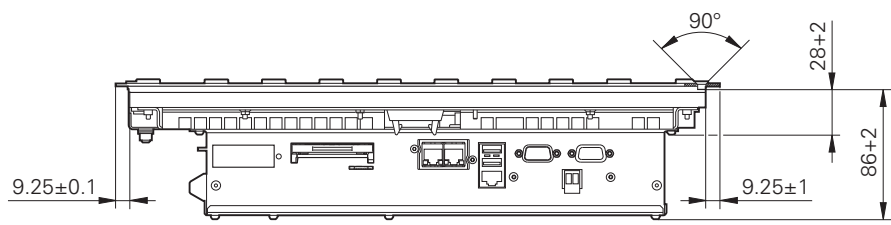 Tolerancing ISO 8015
 ISO 2768 - m H
 < 6 mm: ±0.2 mm




CC 6106

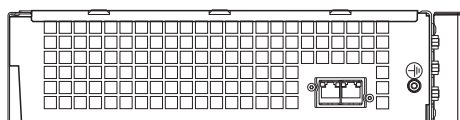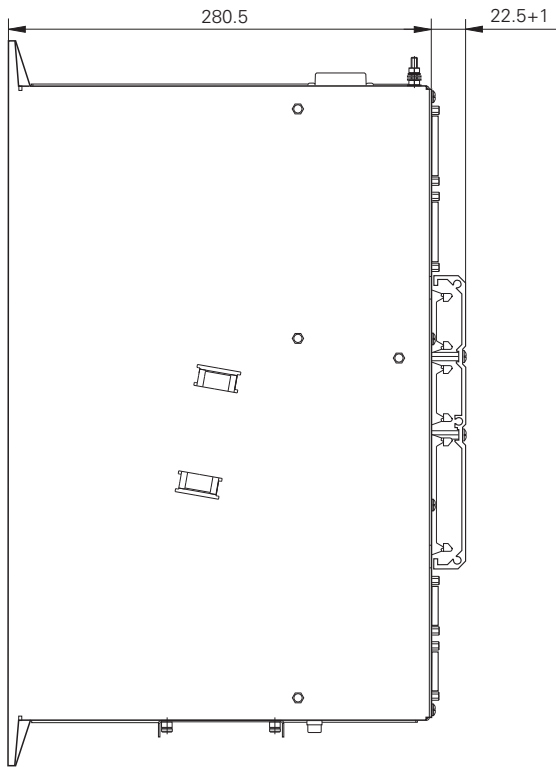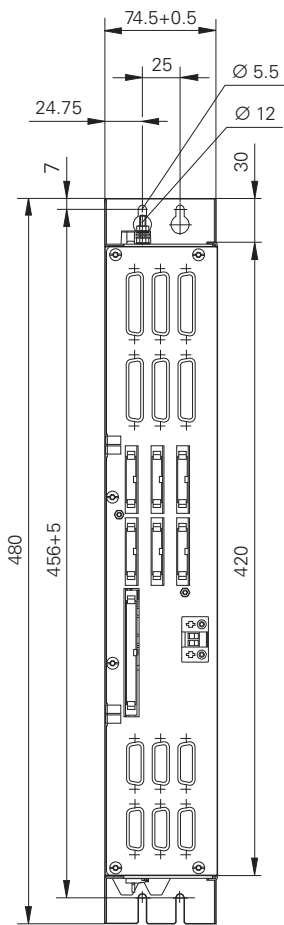
mm
Tolerancing ISO 8015
ISO 2768 - m H
< 6 mm: ± 0.2 mm




UEC 111, UEC 112

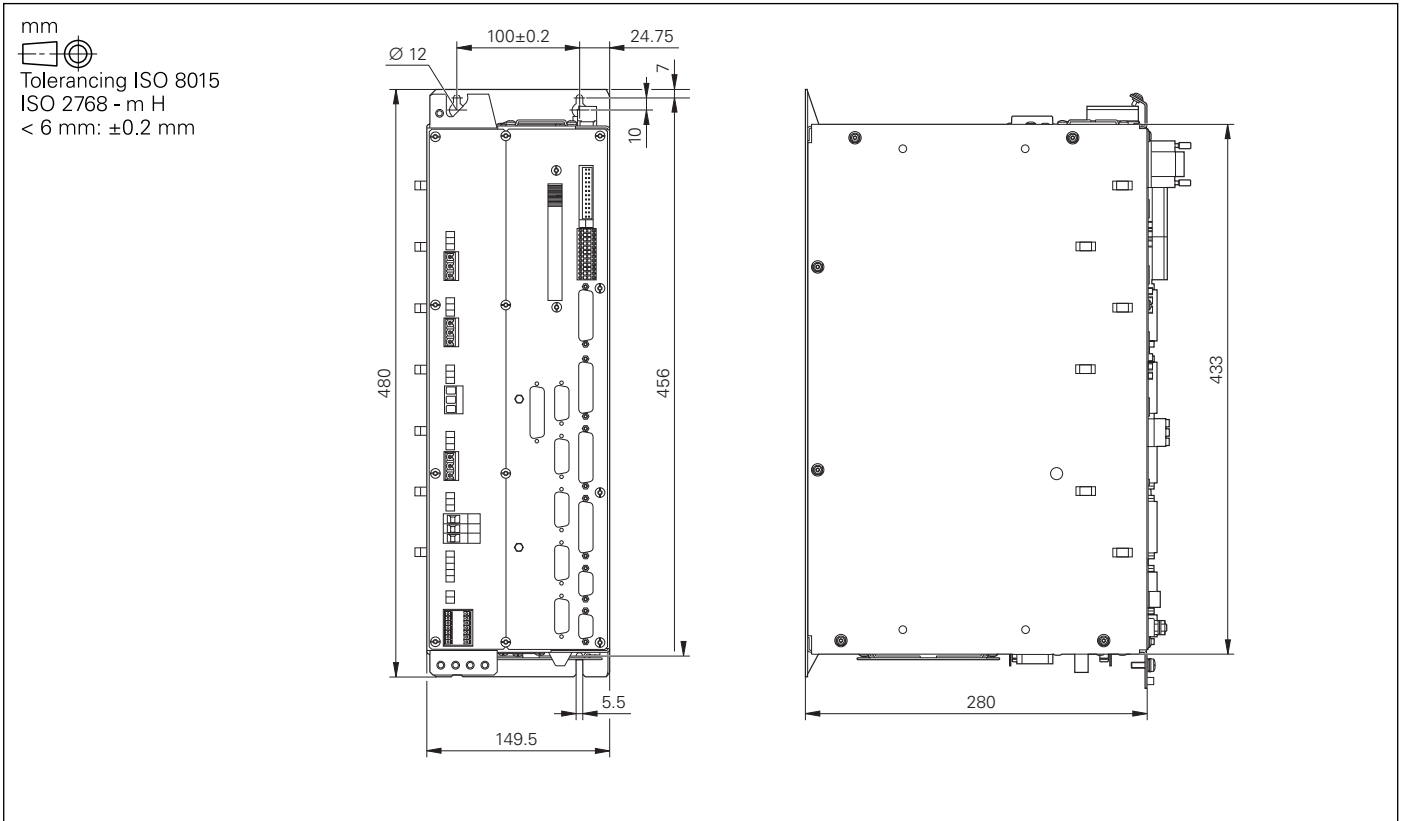


MB 720

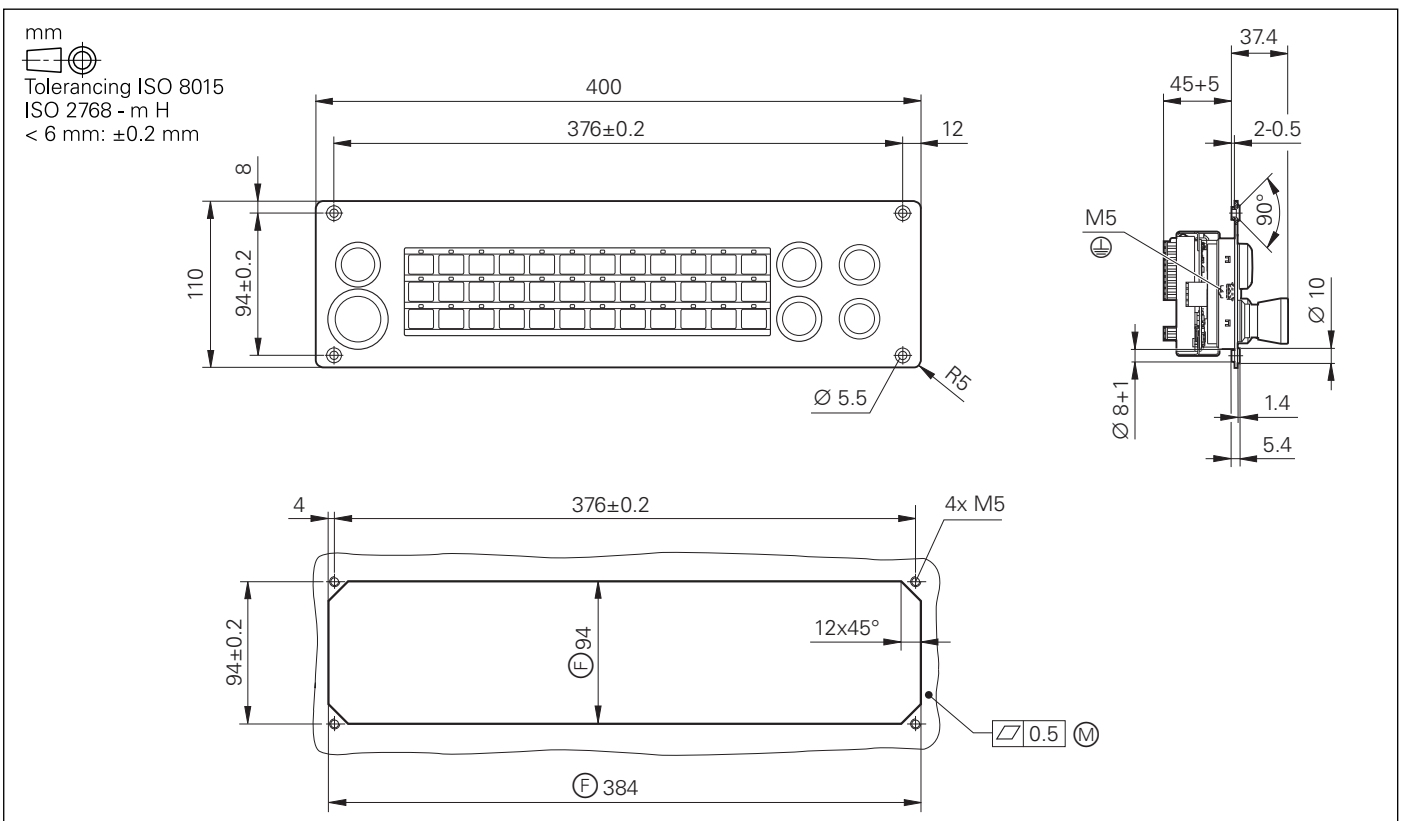


TE 720, TE 730


mm

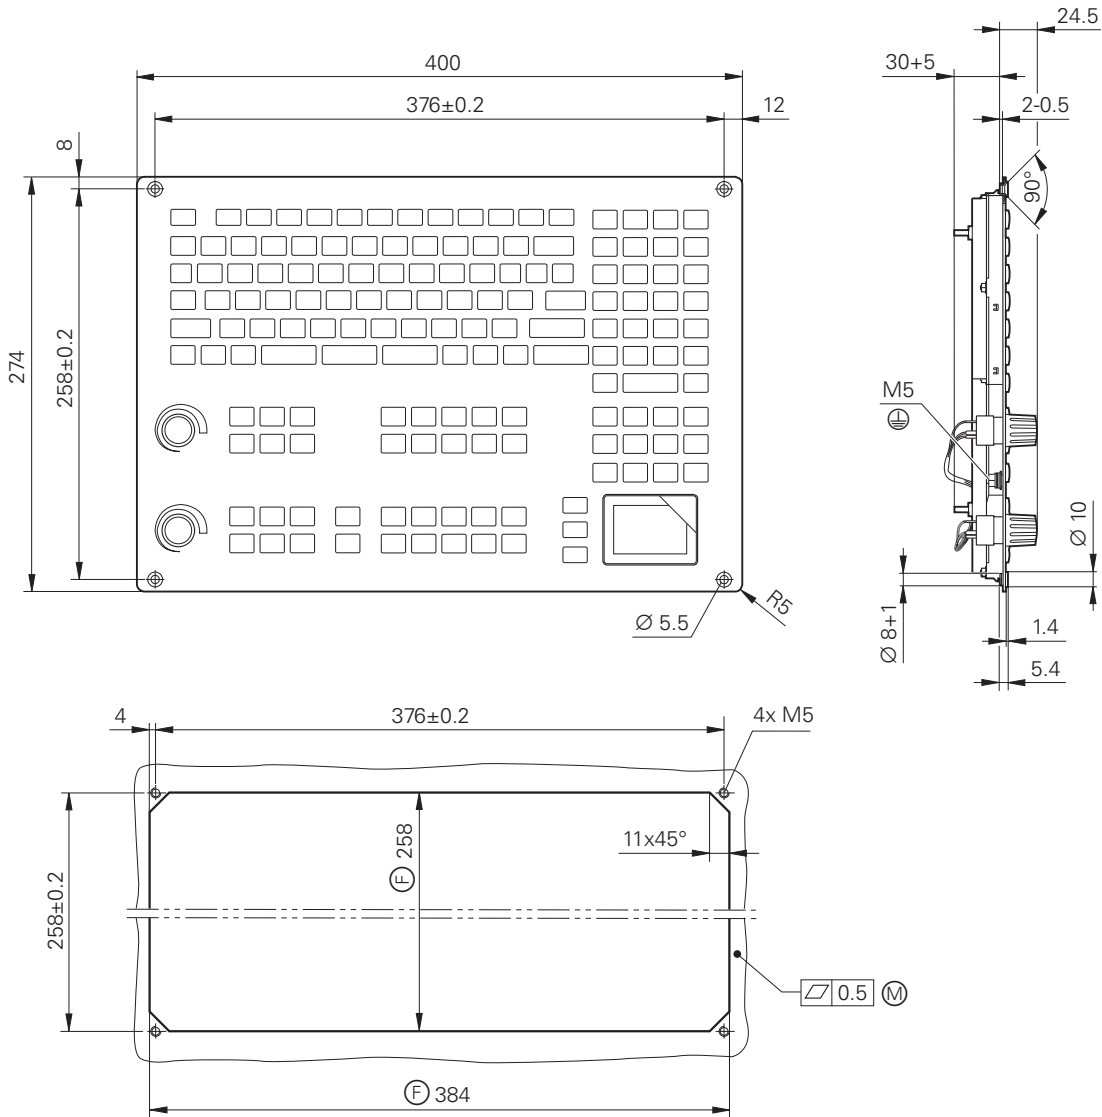 Tolerancing ISO 8015
 ISO 2768 - m H
 < 6 mm: ±0.2 mm



⊕ = Cutout in machine panel
 ⊕ = Mounting surface


TE 735

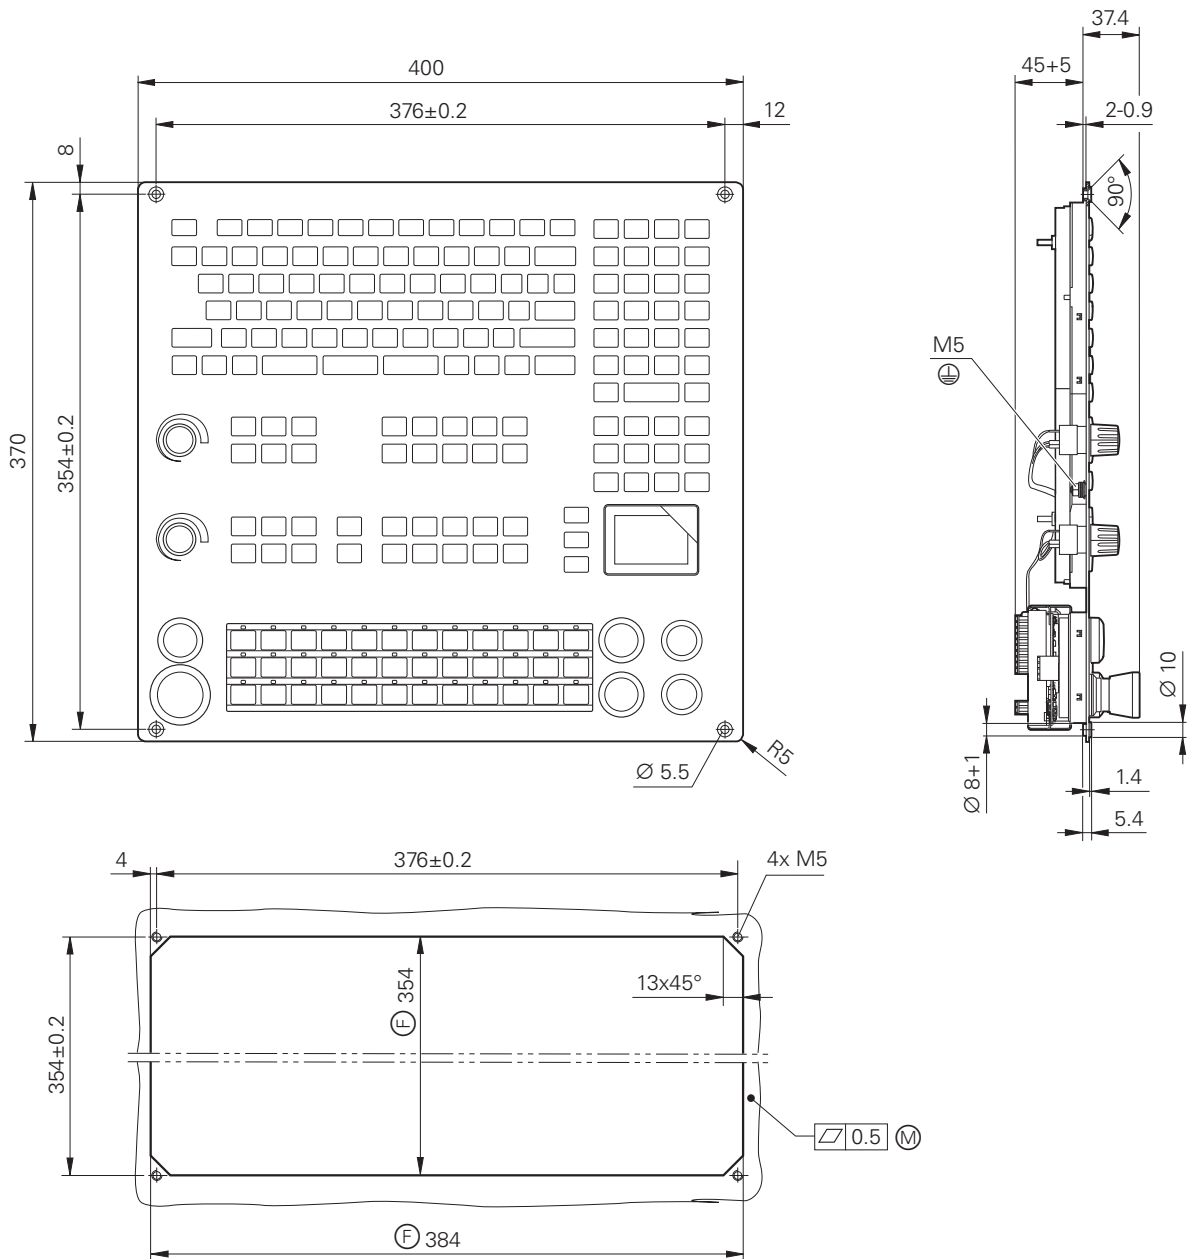mm

 Tolerancing ISO 8015
 ISO 2768 - m H
 < 6 mm: ±0.2 mm




⊖ = Cutout in machine panel
 ⊕ = Mounting surface

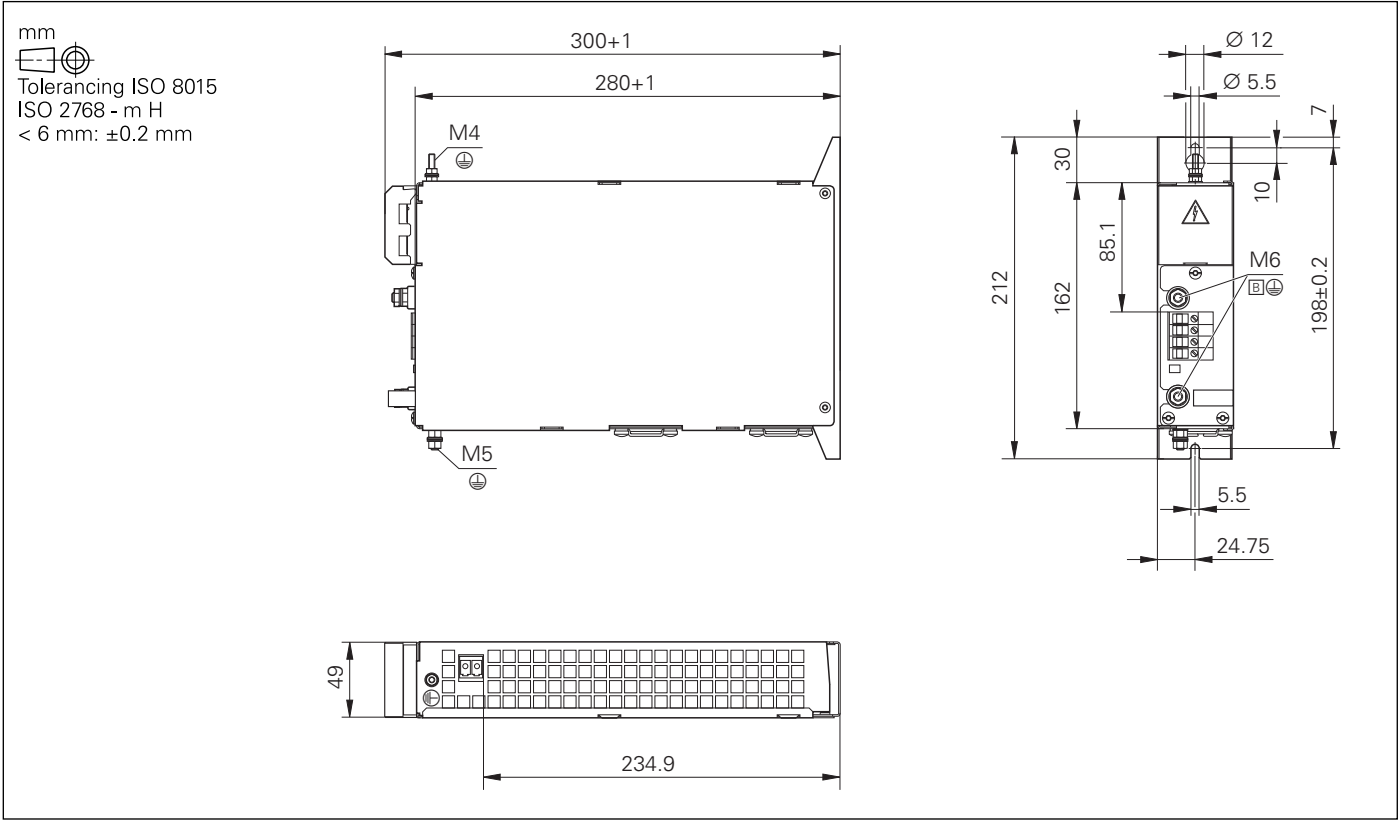
PSL 130




PL 550

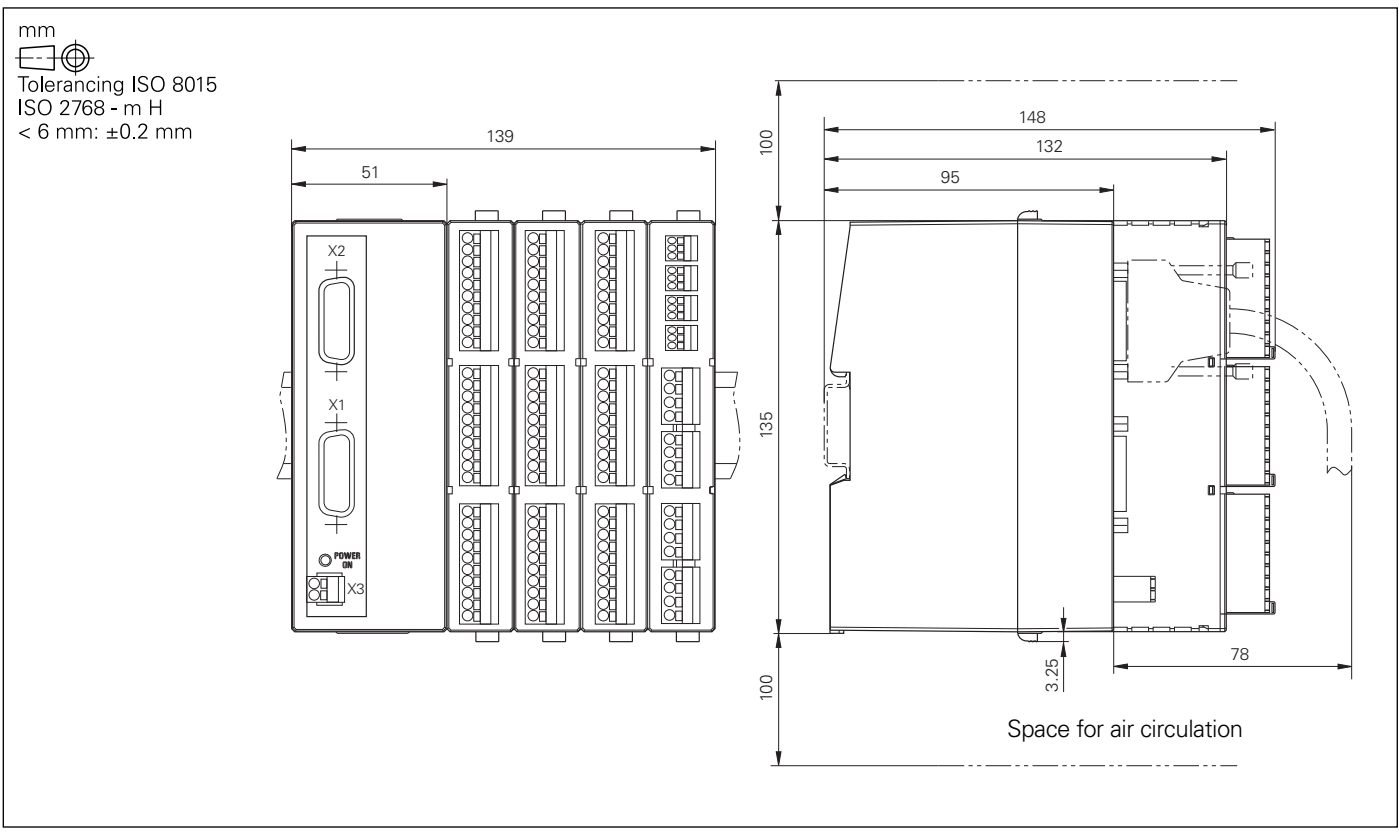


PL 6xxx

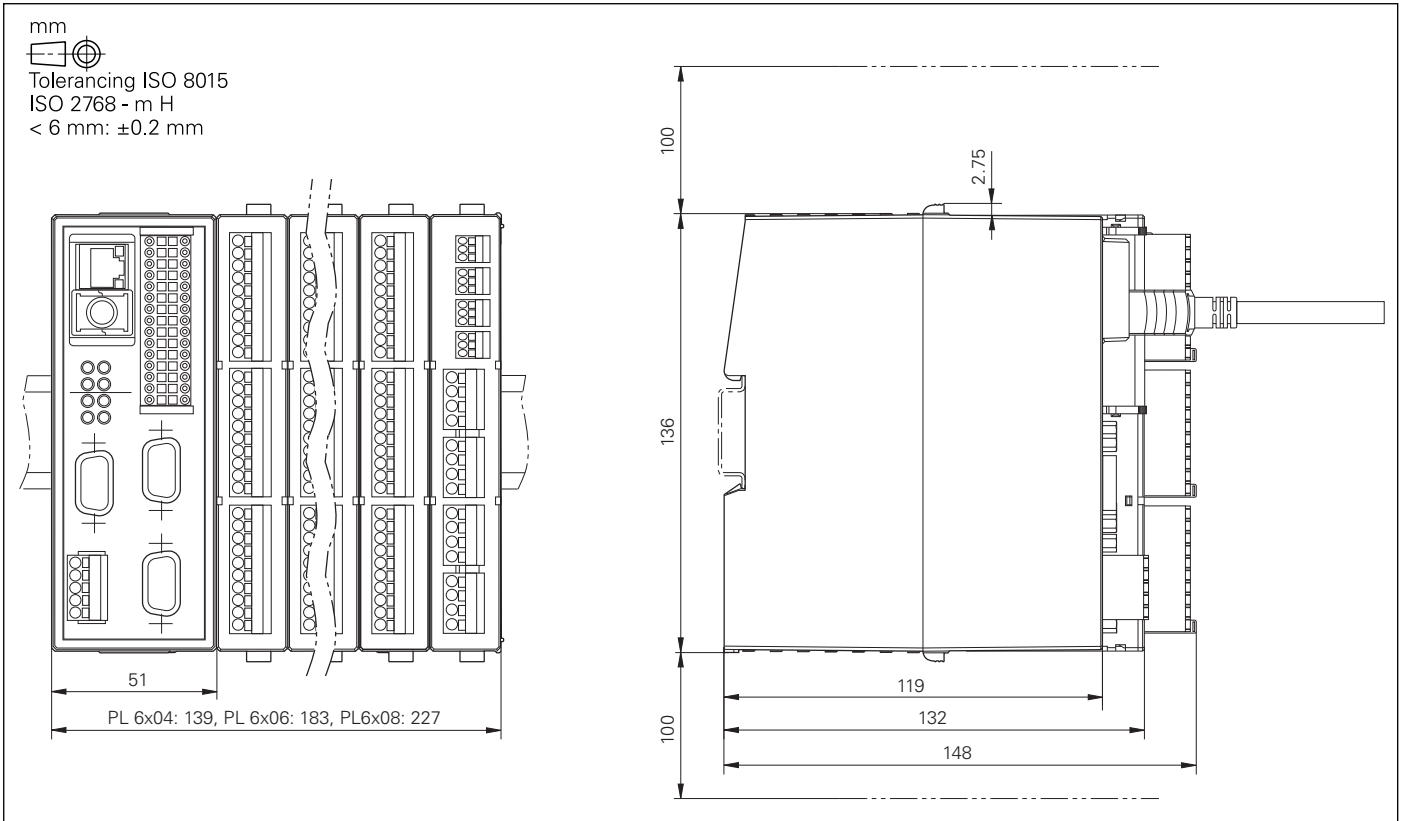


PLB 6001

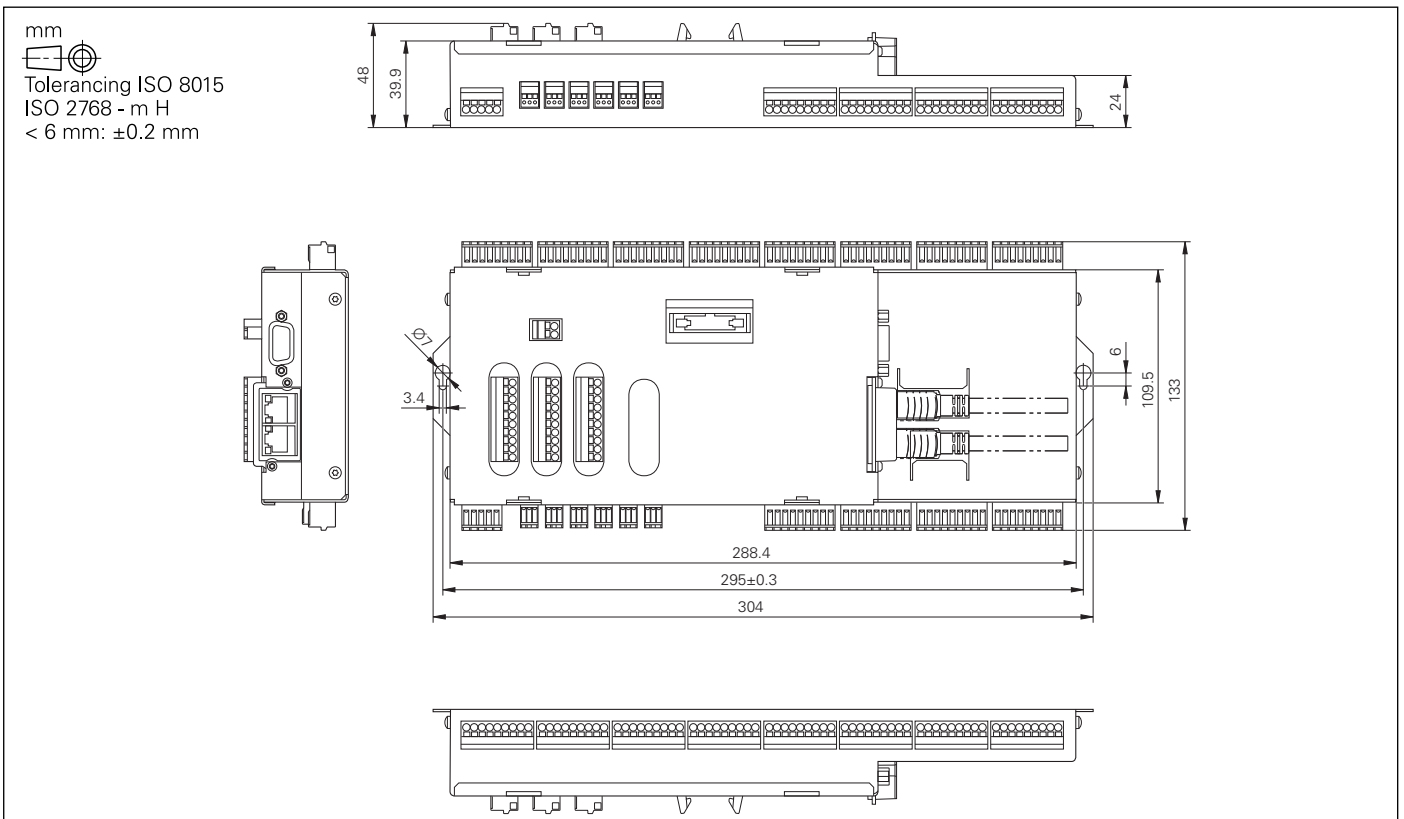

HR 410

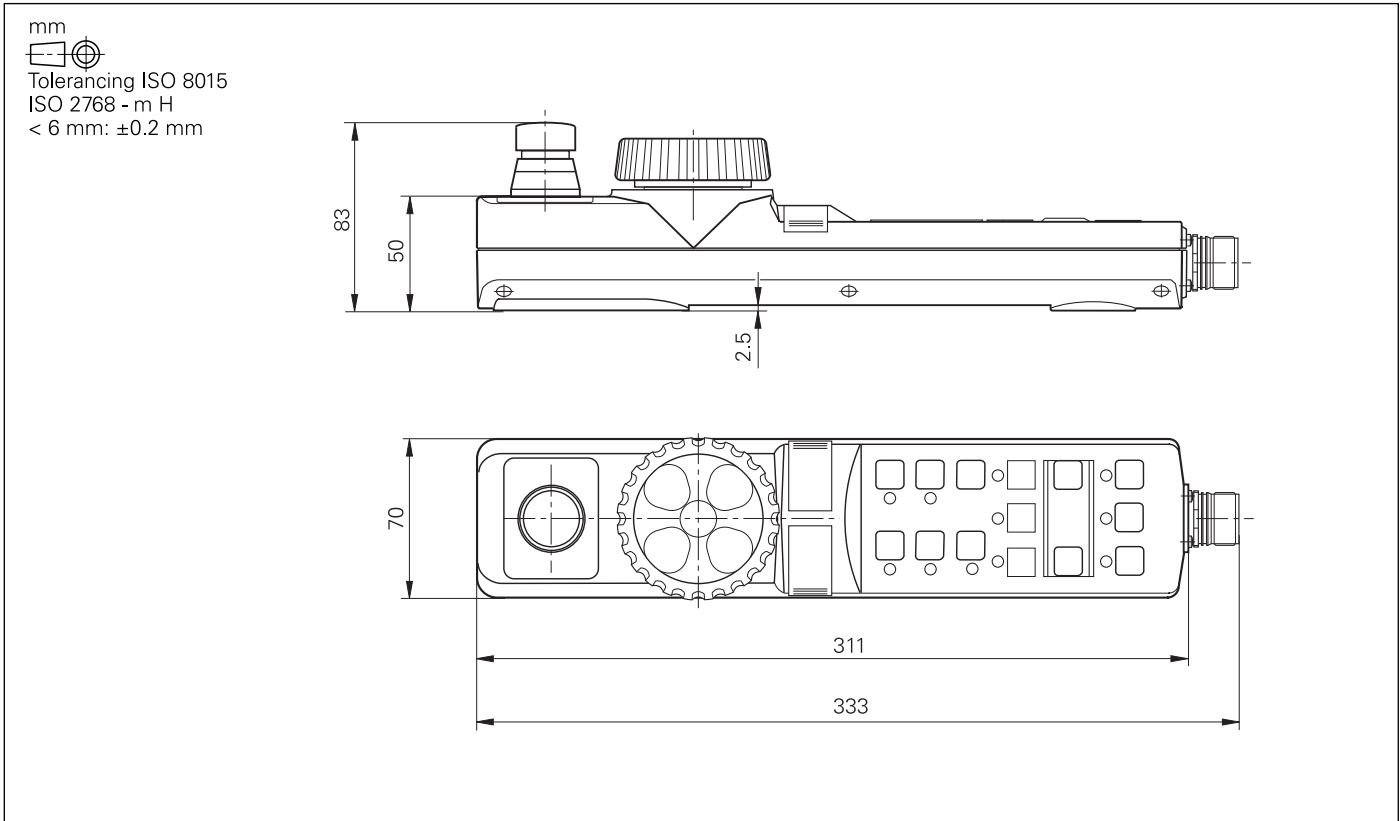

Adapter Cable for HR 410

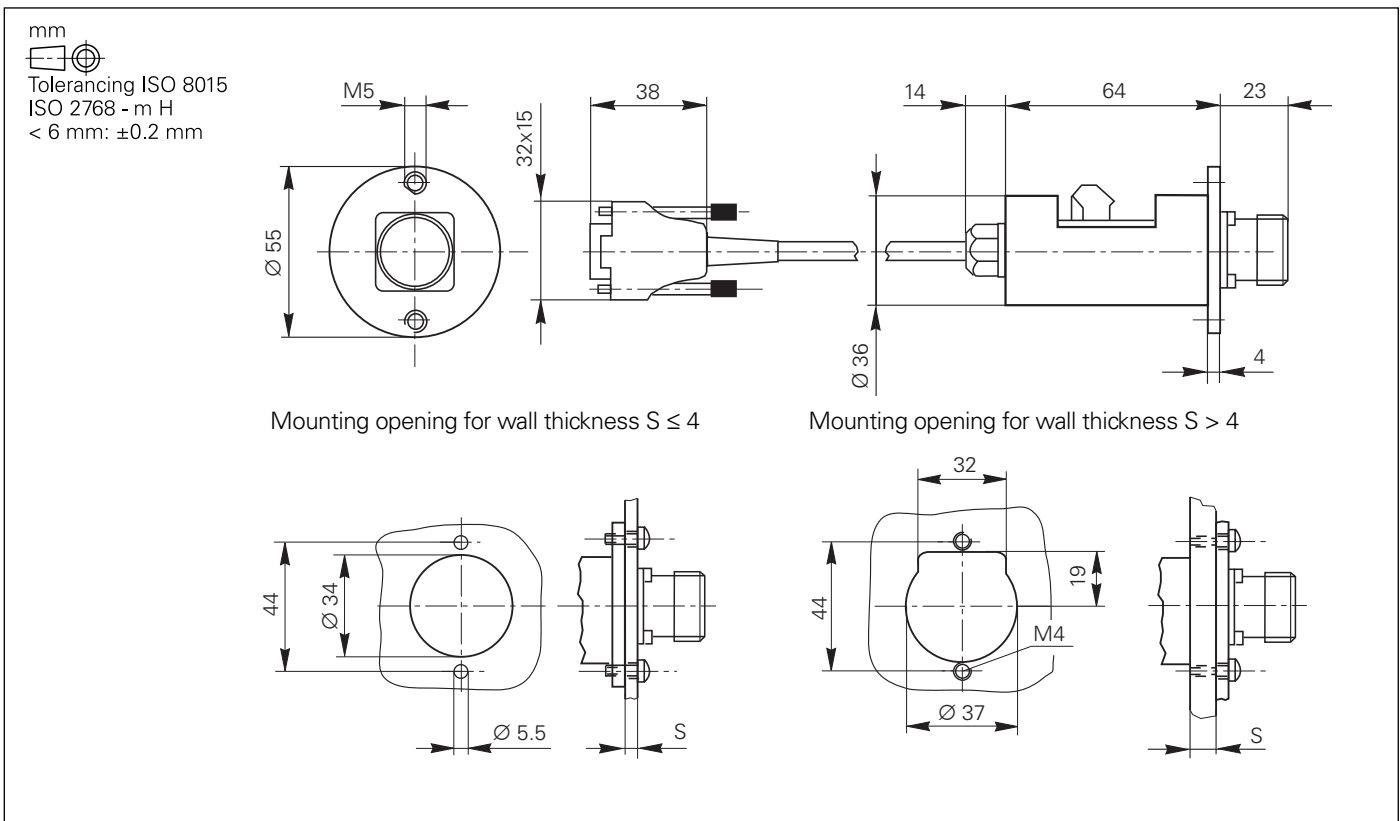

HR 130, HR 150 with Control Knob



mm




Tolerancing ISO 8015

ISO 2768 - m H


< 6 mm: ±0.2 mm

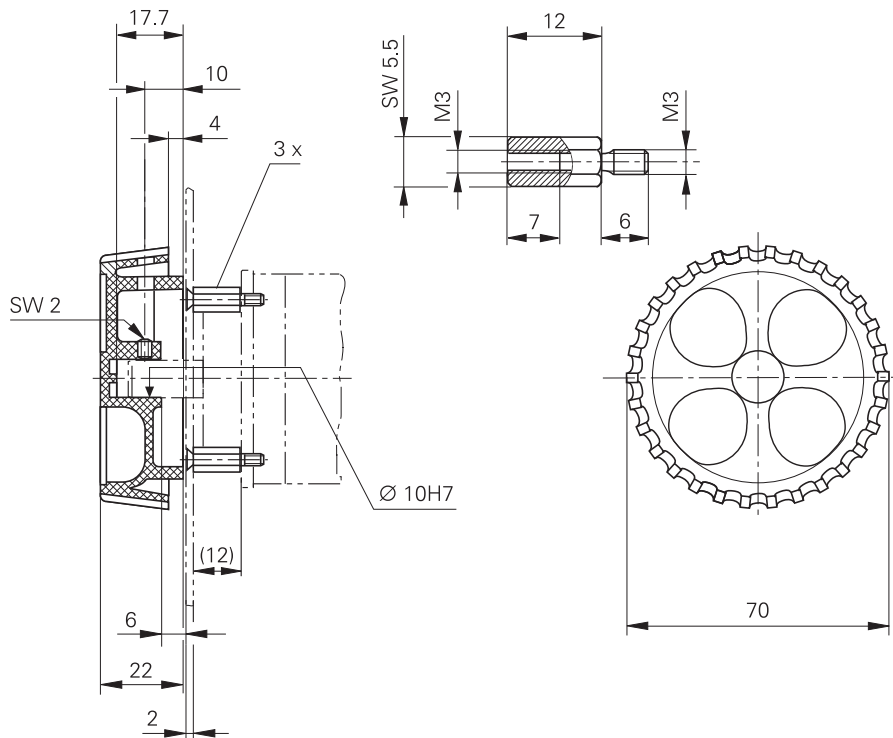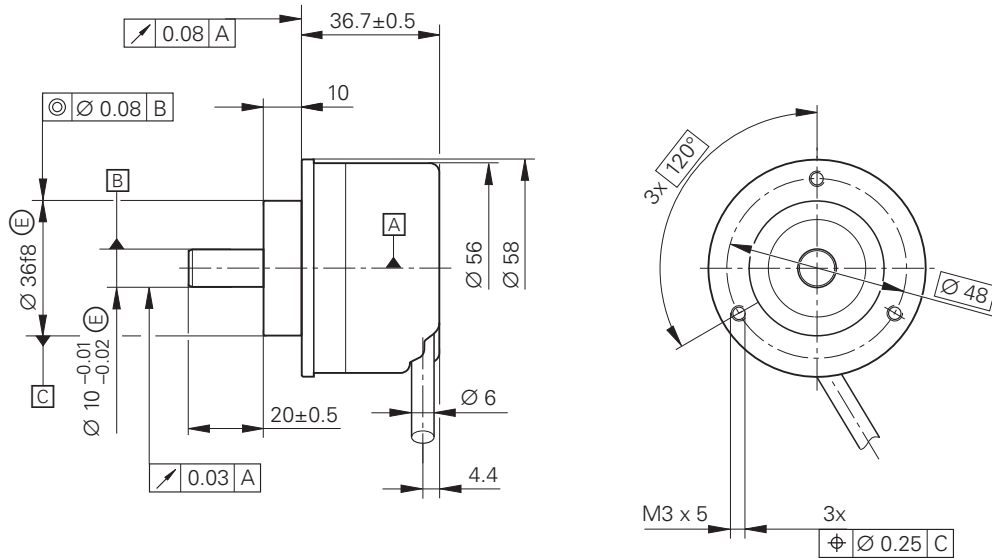


Line Drop Compensator for Encoders with EnDat Interface

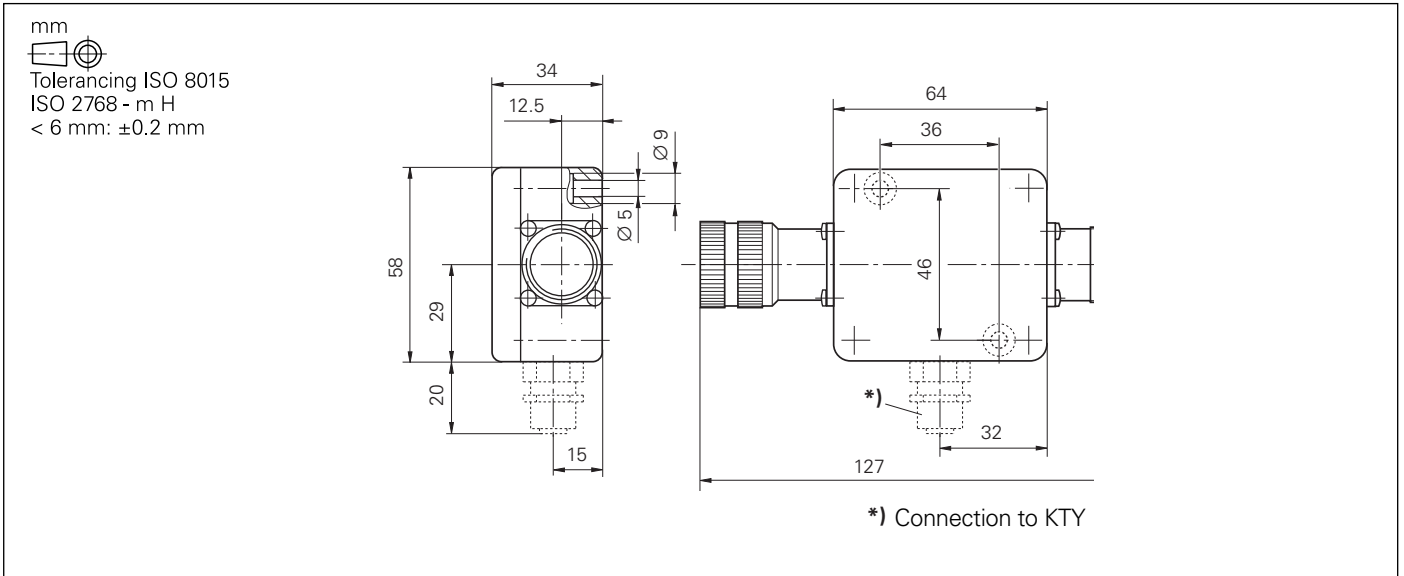


RS-232-C Adapter

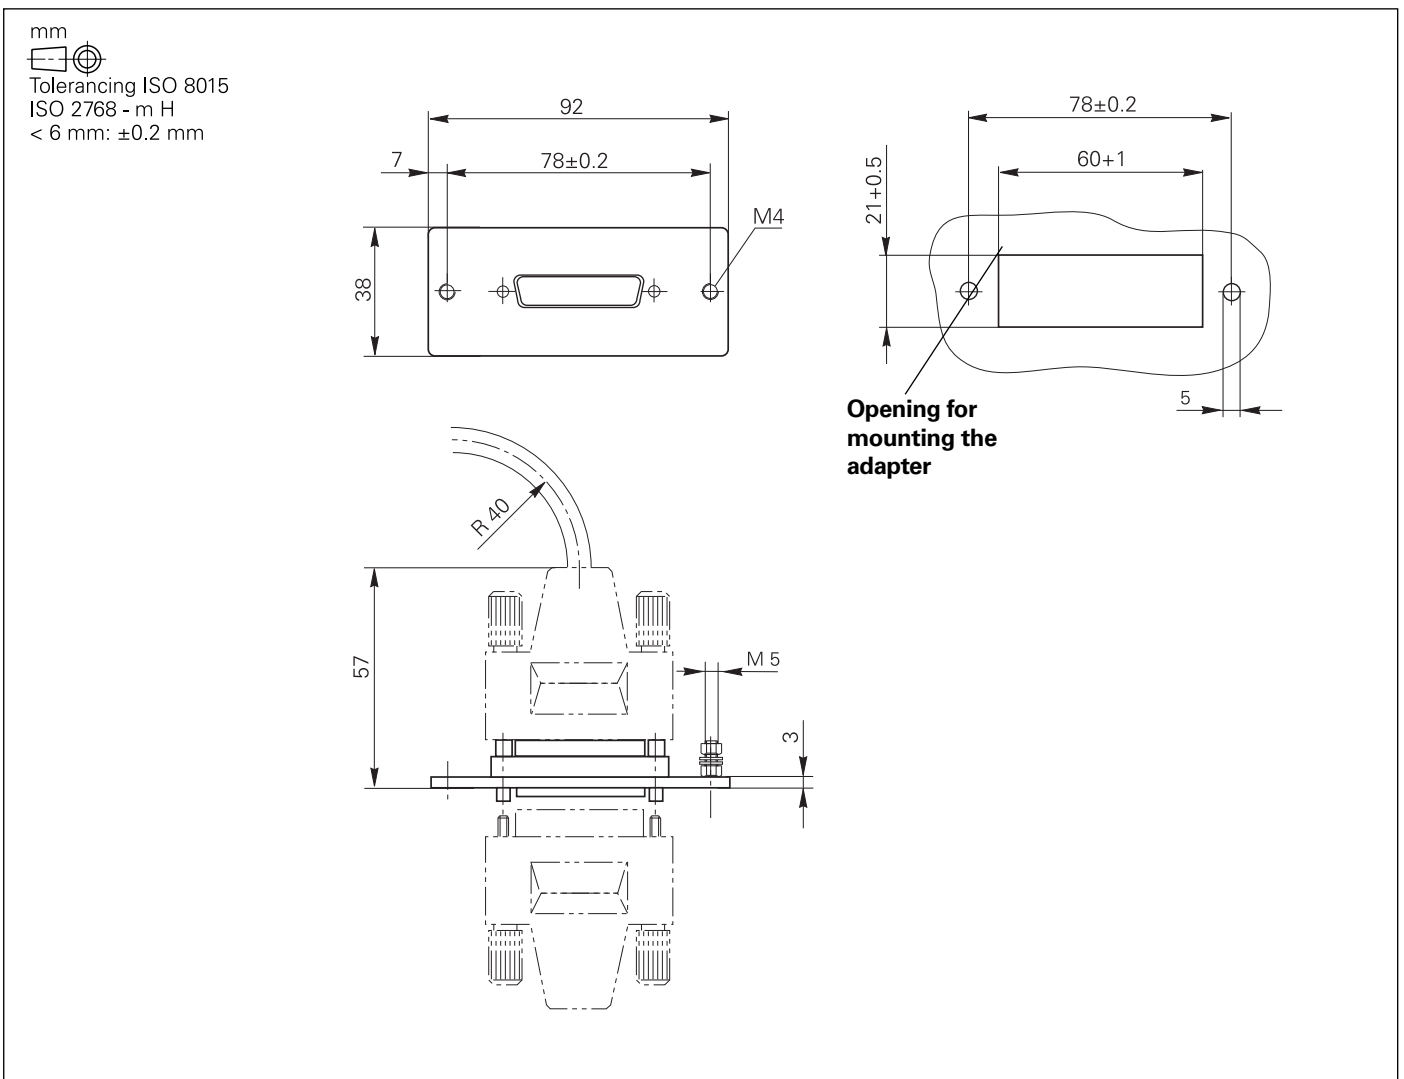

USB Hub

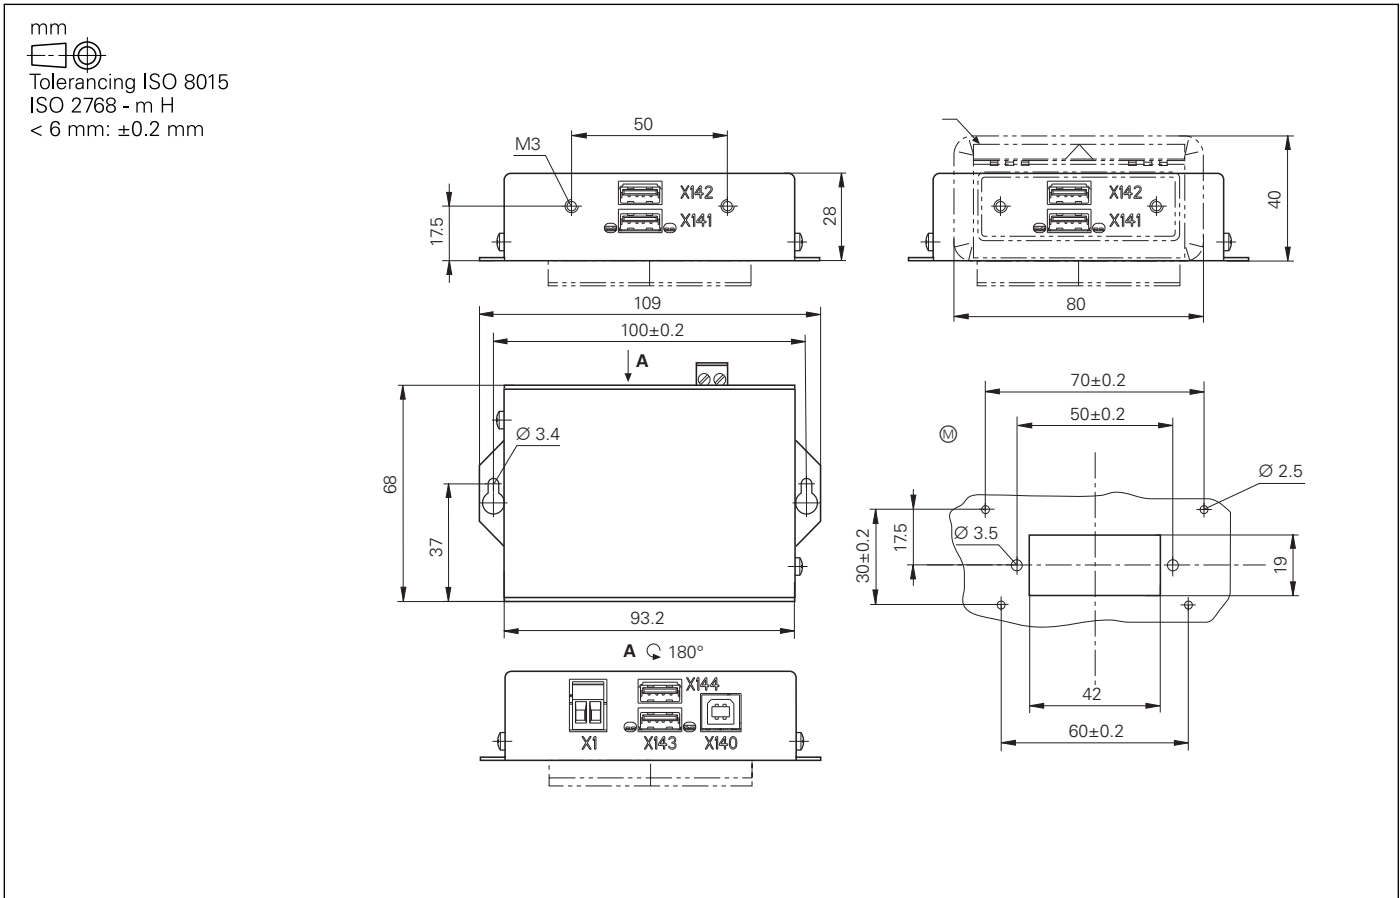

USB Extension Cable with Hubs

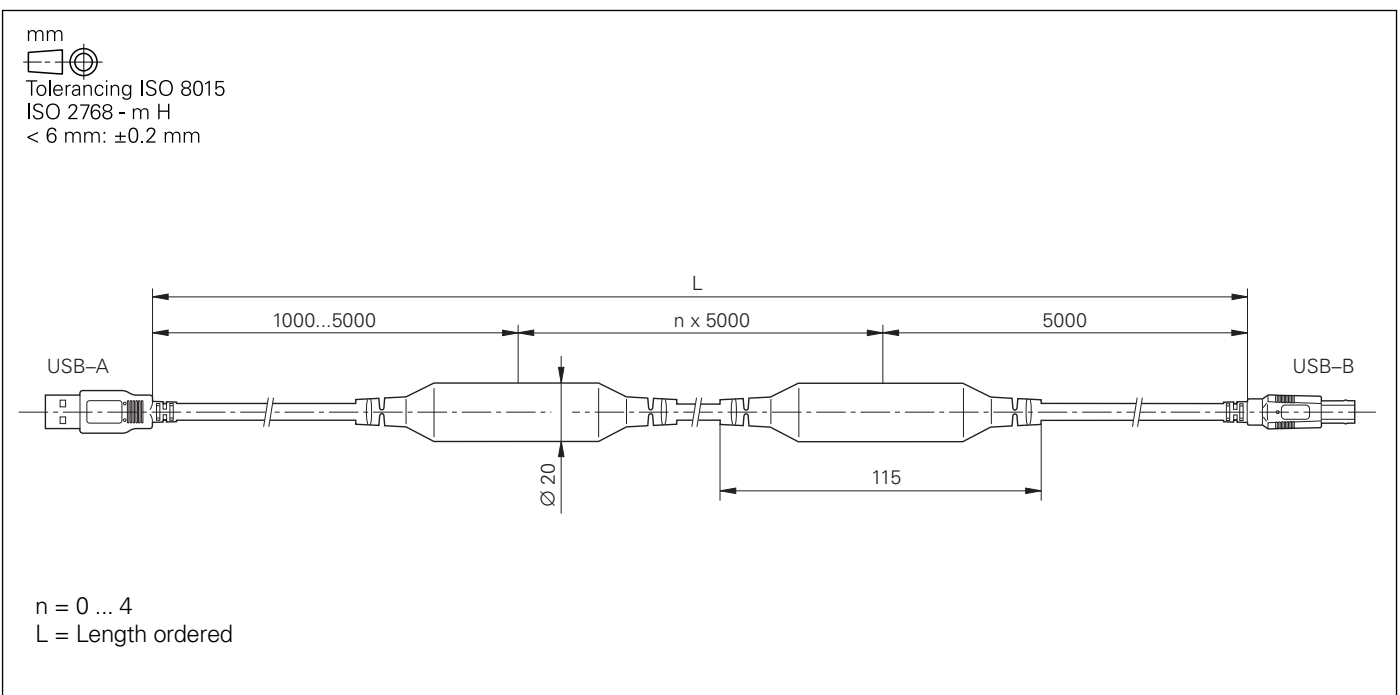

Documentation

Items supplied with the control include:

- 1 User's Manual for HEIDENHAIN conversational programming
- 1 User's Manual for DIN/ISO programming
- 1 User's Manual for Cycle Programming

This documentation must be ordered separately in the language required.

Further documentation is available from HEIDENHAIN.

Technical documentation

- Technical Manual for **TNC 620** in PDF format on the HESIS web including FileBase
- Technical Manual for **Inverters and Motors** ID 208962-xx
- Mounting Instructions for **TS 220** ID 312821-91
- Mounting Instructions for **TS 440** ID 632756-9x
- Mounting Instructions for **TS 444** ID 632757-9x
- Mounting Instructions for **TS 640** ID 632760-9x
- Mounting Instructions for **TS 740** ID 632761-9x
- Mounting Instructions for **TT 140** ID 297510-xx
- Mounting Instructions for **TT 449** ID 664914-xx

User documentation TNC 620

- User's Manual for **Conversational Format** ID 636026-xx
- User's Manual for **Touch Probe Cycles** ID 679295-xx
- User's Manual for **DIN/ISO** ID 679355-xx

Other documentation

- User's Manual for **TNCremo** As integrated help and in PDF format
- User's Manual for **TNCremoPlus** As integrated help and in PDF format
- User's Manual for **PLCdesign** As integrated help and in PDF format
- User's Manual for **CycleDesign** As integrated help and in PDF format
- User's Manual for **IOconfig** As integrated help and in PDF format
- User's Manual for **KinematicsDesign** As integrated help and in PDF format

Other documentation

- Brochure for **TNC 620** ID 636034-xx
- Brochure for **Touch Probes** ID 208951-xx
- Brochure for **Inverter Systems** ID 622420-xx
- Brochure for **Motors** ID 208893-xx
- Brochure for **HEIDENHAIN DNC** PDF
- Product Overview
- **Remote Diagnosis with TeleService** ID 348236-xx
- CD-ROM on **Touch Probes** ID 344353-xx
- CD-ROM on **TNC320/TNC 620 programming station**
- Demo-Version ID 741708-xx
- Technical information on **Uniformly Digital** PDF

HEIDENHAIN Service

Technical support HEIDENHAIN offers the machine manufacturer technical support to optimize the adaptation of the TNC to the machine—including on-site support.

Replacement control system In the event of a fault, HEIDENHAIN guarantees the rapid supply of a replacement control system (usually within 24 hours in Europe).

Hotline Our service engineers are naturally at your disposal by telephone if you have any questions on the interfacing of the control or in the event of faults.

TNC support ☎ +49 8669 31-3101
E-mail: service.nc-support@heidenhain.de

PLC programming ☎ +49 8669 31-3102
E-mail: service.plc@heidenhain.de

NC programming ☎ +49 8669 31-3103
E-mail: service.nc-pgm@heidenhain.de

Measuring systems ☎ +49 8669 31-3104
E-mail: service.ms-support@heidenhain.de

Lathe controls ☎ +49 8669 31-3105
E-mail: service.lathe-support@heidenhain.de

Machine calibration On request, HEIDENHAIN engineers will calibrate your machine's geometry, for example with a KGM grid encoder.

Seminars

HEIDENHAIN provides technical customer training in the following subjects:

- NC programming
- PLC programming
- TNC optimization
- TNC service
- Encoder service
- Special training for specific customers


For more information on dates, registration, etc. call in Germany:

☎ +49 8669 31-2293 or 31-1695

FAX +49 8669 31-1999

E-mail: mtt@heidenhain.de

www.heidenhain.de

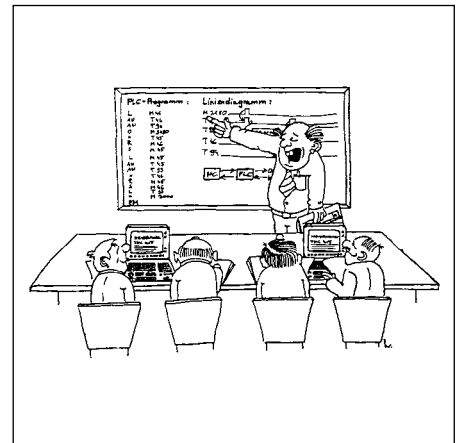


Other HEIDENHAIN Controls

iTNC 530

Information:
iTNC 530 brochure

- Contouring control for **milling, drilling and boring machines, and machining centers**
- Up to 18 axes and controlled main spindle
- HEIDENHAIN inverter systems and motors recommended
- Uniformly digital with HSCI interface and EnDat interface
- TFT color flat-panel display, 15- or 19-inch
- Storage medium: HDR hard disk with 160 GB/SSDR solid state disk with 32 GB
- Programming in HEIDENHAIN conversational format, with smarT.NC or according to DIN/ISO
- Standard milling, drilling and boring cycles
- Touch probe cycles
- FK free contour programming
- Special functions for fast 3-D machining
- Short block processing time (0.5 ms)
- Automatic calculation of cutting data
- Pallet management

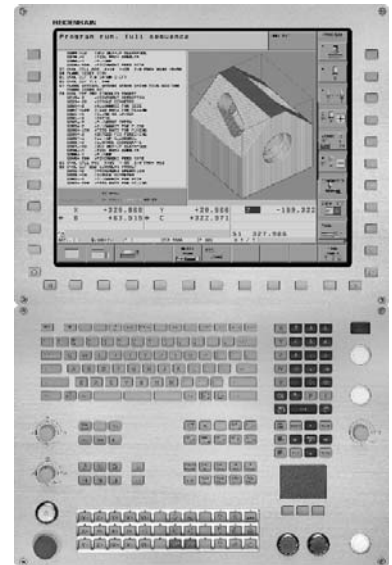

TNC 640

Information:
TNC 640 brochure


- Contouring control for **milling and mill-turning machines**
- Up to 18 axes and controlled main spindle
- HEIDENHAIN inverter systems and motors recommended
- Uniformly digital with HSCI interface and EnDat interface
- 19-inch TFT color flat-panel display
- HDR 160 GB hard disk as storage medium
- Programming in HEIDENHAIN conversational format or according to ISO
- Comprehensive cycle package for milling and turning operations
- Constant surface speed
- Tool-tip radius compensation
- Touch probe cycles
- FK free contour programming
- Special functions for fast 3-D machining
- Short block processing time (0.5 ms)



CNC PILOT 620

Information:
CNC PILOT 620 brochure

- Contouring control for **horizontal and vertical lathes**
- Up to 3 axes (X, Z and Y), controlled spindle and counterspindle, C1/C2 axis and driven tools
- Up to 3 programmable auxiliary axes (U, V, W) for control of steady rest, tailstock and counterspindle
- The position of a parallel secondary axis can be shown combined with its principal axis.
- HEIDENHAIN inverter systems and motors recommended
- Uniformly digital with HSCI interface and EnDat interface
- 19-inch TFT flat-panel display
- Storage medium: CompactFlash memory card
- Programming of turning, drilling and milling operations with smarT.turn, according to DIN or via cycles
- Free ICP contour programming for turning and milling contours

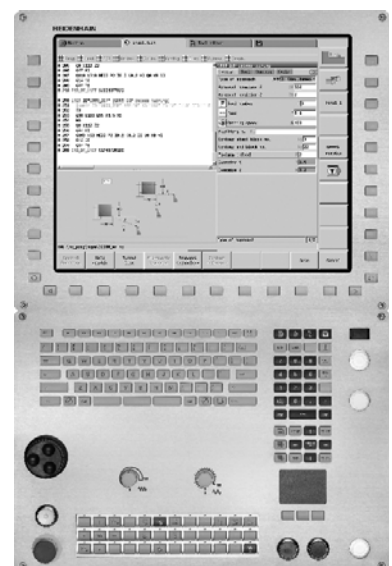

Subject Index

Symbols

5-axis machining 38

A

Absolute encoders..... 43
 Accessories..... 8
 ApiData 49
 Axes 37
 Axis clamping..... 37
 Axis feedback control 40

B

Backlash 44
 Basic module 22
 Basic modules 21
 Block processing times, short..... 42
 Bus diagnosis..... 49

C

Cable overview 31
 Calibration sphere 45
 CC 6106..... 19, 60
 CFR 17
 CMA-H 04- 27
 Commissioning and diagnostic aids..... 48
 Compensation of torque ripples..... 40
 ConfigDesign 48
 Context-sensitive help 46
 Controller unit 19
 Control loop cycle times 41
 CycleDesign 54
 Cylinder surface interpolation 37

D

Data interfaces..... 55
 Digital control..... 40
 Digital control design 14
 DNC applications 56
 Documentation 71
 Double-speed..... 19
 Double-speed control loops 41
 DriveDiag..... 48

E

Electromagnetic compatibility..... 57
 Electronic handwheels 25
 Encoders 43
 Error compensation 44
 Ethernet 55
 Expansion PL 21
 Export version 16

F

Feedforward control, operation with..... 40
 Following error (servo lag),
 operation with..... 40

G

Gear stages..... 47

H

HEIDENHAIN DNC..... 56
 HR 130 25, 67
 HR 150 26, 67
 HR 410 25, 66
 HRA 110 26

HSCI 14
 Hysteresis 44

I

Incremental encoders..... 43
 Integrated inverters 40
 Integrated PLC..... 50
 IOconfig 21
 IOconfig software for PCs..... 20
 I/O modules 21, 22

J

Jerk..... 41
 Jerk limiting..... 41

K

Keyboard unit..... 23
 KinematicsDesign..... 46
 KinematicsOpt 45

L

Linear axes 37
 Linear error..... 44
 Log 49
 Look-ahead..... 42

M

Machine configuration 42
 Machine interfacing 6
 Machine operating panel 23
 Main computer 16
 Master keyword..... 17
 MB 720 23, 61
 MC 7110 16, 58
 MC 7120 16, 59
 Monitoring functions 46
 Mounting instructions..... 57

N

NC software license 18
 Nonlinear errors 44

O

OEM cycles..... 54
 Online monitor 48
 Options..... 12
 Oscilloscope..... 49
 Overall dimensions 58

P

Pallet management..... 54
 PL 6xxx..... 21, 65
 PL 550 22, 64
 PLB 550 22
 PLB 6001 27
 PLC axes 39, 51
 PLC basic program 53
 PLCdesignNT 52
 PLC input/output systems..... 21
 PLC inputs/outputs 50
 PLC positioning..... 51
 PLC programming 50
 PLC soft keys 51
 PLC window 51
 Position-controlled spindle..... 47
 PSL 130 24, 64
 Python OEM Process 52

R

Reversal peaks 44
 Rotary axes 37
 RS-232-C/V.24 55

S

Second spindle 47
 Seminars 72
 Service 72
 SIK component 17
 Single-speed 19
 Sliding friction 44
 Smoother jerk 41
 Snap-on keys 28, 29
 Software for data transfer..... 56
 Specifications..... 4
 Spindle 47
 Spindle orientation..... 47
 Spindle speed 47
 Stick-slip friction 44
 Synchronized axes 39
 System PL..... 21

T

Table function..... 49
 TE 720 23, 62
 TE 730 23, 62
 TE 735 23, 63
 Technical description..... 37
 TeleService..... 49
 Thermal expansion 44
 Tilting the working plane 38
 TL Micro 30
 TL Nano..... 30
 TNCopt..... 48
 TNCremoNT 56
 TNCremoPlus 56
 TNCscopeNT 49
 Tool management 54
 Tool measurement..... 30
 Torque control 39
 Touch-probe configuration 54
 Touch probes..... 30
 Trace function..... 49

U

UEC 11x 20
 UEC 111 20, 61
 UEC 112 20, 61
 Uniformly digital..... 14
 USB 55
 USB cable 55
 USB hub..... 55
 User functions 10

W

Workpiece measurement..... 30

HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 8669 31-0

FAX +49 8669 5061

E-mail: info@heidenhain.de

www.heidenhain.de

Vollständige und weitere Adressen siehe www.heidenhain.de
For complete and further addresses see www.heidenhain.de

DE	HEIDENHAIN Vertrieb Deutschland 83301 Traunreut, Deutschland ☎ 08669 31-3132 FAX 08669 32-3132 E-Mail: hd@heidenhain.de	DK	TPTEKNIK A/S 2670 Greve, Denmark www.tp-gruppen.dk	NO	HEIDENHAIN Scandinavia AB 7300 Orkanger, Norway www.heidenhain.no
	HEIDENHAIN Technisches Büro Nord 12681 Berlin, Deutschland ☎ 030 54705-240	ES	FARRESA ELECTRONICA S.A. 08028 Barcelona, Spain www.farresa.es	PH	Machinebanks Corporation Quezon City, Philippines 1113 E-mail: info@machinebanks.com
	HEIDENHAIN Technisches Büro Mitte 08468 Heinsdorfergrund, Deutschland ☎ 03765 69544	FI	HEIDENHAIN Scandinavia AB 02770 Espoo, Finland www.heidenhain.fi	PL	APS 02-489 Warszawa, Poland www.apserwis.com.pl
	HEIDENHAIN Technisches Büro West 44379 Dortmund, Deutschland ☎ 0231 618083-0	FR	HEIDENHAIN FRANCE sarl 92310 Sèvres, France www.heidenhain.fr	PT	FARRESA ELECTRÓNICA, LDA. 4470 - 177 Maia, Portugal www.farresa.pt
	HEIDENHAIN Technisches Büro Südwest 70771 Leinfelden-Echterdingen, Deutschland ☎ 0711 993395-0	GB	HEIDENHAIN (G.B.) Limited Burgess Hill RH15 9RD, United Kingdom www.heidenhain.co.uk	RO	HEIDENHAIN Reprezentantă Romania Braşov, 500338, Romania www.heidenhain.ro
	HEIDENHAIN Technisches Büro Südost 83301 Traunreut, Deutschland ☎ 08669 31-1345	GR	MB Milionis Vassilis 17341 Athens, Greece www.heidenhain.gr	RS	Serbia → BG
		HK	HEIDENHAIN LTD Kowloon, Hong Kong E-mail: sales@heidenhain.com.hk	RU	OOO HEIDENHAIN 125315 Moscow, Russia www.heidenhain.ru
AR	NAKASE SRL. B1653AOX Villa Ballester, Argentina www.heidenhain.com.ar	HR	Croatia → SL	SE	HEIDENHAIN Scandinavia AB 12739 Skärholmen, Sweden www.heidenhain.se
AT	HEIDENHAIN Techn. Büro Österreich 83301 Traunreut, Germany www.heidenhain.de	HU	HEIDENHAIN Kereskedelmi Képviselet 1239 Budapest, Hungary www.heidenhain.hu	SG	HEIDENHAIN PACIFIC PTE LTD. Singapore 408593 www.heidenhain.com.sg
AU	FCR Motion Technology Pty. Ltd Laverton North 3026, Australia E-mail: vicsales@fcrmotion.com	ID	PT Servitama Era Toolsindo Jakarta 13930, Indonesia E-mail: ptset@group.gts.co.id	SK	KOPRETINA TN s.r.o. 91101 Trencin, Slovakia www.kopretina.sk
BA	Bosnia and Herzegovina → SL	IL	NEUMO VARGUS MARKETING LTD. Tel Aviv 61570, Israel E-mail: neumo@neumo-vargus.co.il	SL	Posredništvo HEIDENHAIN NAVO d.o.o. 2000 Maribor, Slovenia www.heidenhain-hubl.si
BE	HEIDENHAIN NV/SA 1760 Roosdaal, Belgium www.heidenhain.be	IN	HEIDENHAIN Optics & Electronics India Private Limited Chetpet, Chennai 600 031, India www.heidenhain.in	TH	HEIDENHAIN (THAILAND) LTD Bangkok 10250, Thailand www.heidenhain.co.th
BG	ESD Bulgaria Ltd. Sofia 1172, Bulgaria www.esd.bg	IT	HEIDENHAIN ITALIANA S.r.l. 20128 Milano, Italy www.heidenhain.it	TR	T&M Mühendislik San. ve Tic. LTD. ŞTİ. 34728 Ümraniye-Istanbul, Turkey www.heidenhain.com.tr
BR	DIADUR Indústria e Comércio Ltda. 04763-070 – São Paulo – SP, Brazil www.heidenhain.com.br	JP	HEIDENHAIN K.K. Tokyo 102-0083, Japan www.heidenhain.co.jp	TW	HEIDENHAIN Co., Ltd. Taichung 40768, Taiwan R.O.C. www.heidenhain.com.tw
BY	Belarus GERTNER Service GmbH 50354 Huerth, Germany www.gertnergroup.com	KR	HEIDENHAIN Korea LTD. Gasan-Dong, Seoul, Korea 153-782 www.heidenhain.co.kr	UA	Gertner Service GmbH Büro Kiev 01133 Kiev, Ukraine www.gertnergroup.com
CA	HEIDENHAIN CORPORATION Mississauga, Ontario L5T2N2, Canada www.heidenhain.com	ME	Montenegro → SL	US	HEIDENHAIN CORPORATION Schaumburg, IL 60173-5337, USA www.heidenhain.com
CH	HEIDENHAIN (SCHWEIZ) AG 8603 Schwerzenbach, Switzerland www.heidenhain.ch	MK	Macedonia → BG	VE	Maquinaria Diekmann S.A. Caracas, 1040-A, Venezuela E-mail: purchase@diekmann.com.ve
CN	DR. JOHANNES HEIDENHAIN (CHINA) Co., Ltd. Beijing 101312, China www.heidenhain.com.cn	MX	HEIDENHAIN CORPORATION MEXICO 20235 Aguascalientes, Ags., Mexico E-mail: info@heidenhain.com	VN	AMS Co. Ltd HCM City, Vietnam E-mail: davidgoh@amsvn.com
CZ	HEIDENHAIN s.r.o. 102 00 Praha 10, Czech Republic www.heidenhain.cz	MY	ISOSERVE Sdn. Bhd 56100 Kuala Lumpur, Malaysia E-mail: isoserve@po.jaring.my	ZA	MAFEMA SALES SERVICES C.C. Midrand 1685, South Africa www.heidenhain.co.za
		NL	HEIDENHAIN NEDERLAND B.V. 6716 BM Ede, Netherlands www.heidenhain.nl		

